Before using the dishwasher, read the user instructions!

6ADG 6956 Quick Reference Guide

GB

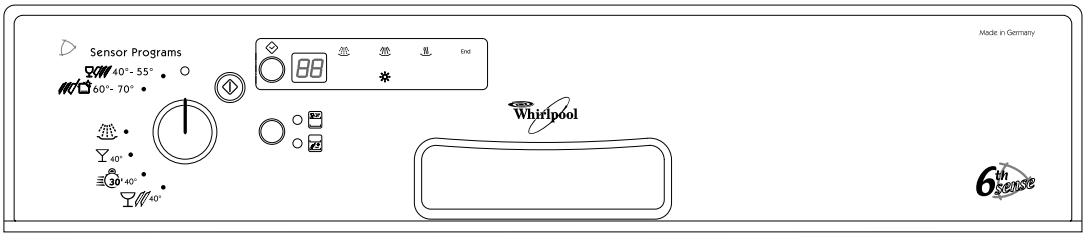

Program selector knob
Mains **On / Off**

Start button
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Indicators

Add rinse aid

Wash cycle

Pre-Rinse **Washing** **Drying** **Programme end**

Options

"Half load - Multizone" button
Load the upper **or** lower rack **only**.
This function can be used with any programme.
Press once = upper rack (the indicator lamp comes on)
Press twice = lower rack (the indicator lamp comes on)
Press 3 times = Off (half load function deactivated).

Time and failure display [3]
Indicates in hours the time remaining until the start of the wash cycle. Toward the end of the programme, during the drying cycle, the display will indicate the time remaining in minutes.
"F..." Identification of faults for service technician

"Delayed start" button
The wash cycle can be programmed to start after 1 - 24 hours. With each successive touch of the button, the delayed start indicator increases by 1 hour, and after 24 returns to 00. Then press the Start button. The dishwasher will start at the set time.

Programme chart				Detergent [2]		Consumption [3]		
Programmes			Loading instructions	A	B	Litres	kWh	Minutes
	Sensor Wash	40-55°C	Automatic programme recommended for routine washes, with no dried-on or burnt food (not for EN 50242).	X	X	10,0-13,0	0,80-1,05	50-110
	Sensor Intensive	60-70°C	Automatic programme recommended for heavily soiled crockery with dried-on or burnt food, for example pans and saucepans.	X	X	13,0-20,0	1,10-2,00	90-140
	Pre-Rinse	cold	Crockery to be washed later.	-	-	4,0	0,03	14
	Glass	40°C	Light soiling, for example glasses and cups.	X	-	10,0	0,80	55
	Quickwash	40°C	Lightly soiled crockery with no dried-on food.	X	-	10,0	0,65	30
	Normal [1]	40°C	Normally or heavily soiled crockery.	X	X	17.0	0.89	98

1) **Reference program for energy label compliance with AS/NZS 2007;**
2) **Refer to "User instructions";**
3) **Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.**

Important information for Test Laboratories:
For detailed information on the EN comparison test and other tests, contact the following address: "nk_customer@email.whirlpool.com".

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91268

(We reserve the right to make technical modifications)

WH/I/K/AUS

How to use the appliance

Further indications are given in the single chapters and in the user instructions.

Switch on the appliance

Automatic start by turning the programme selector knob (in case of retractable knob, first press the knob to access it).

How to fill the detergent

Large compartment **A:**
With each wash cycle.
Small compartment **B:**
For programmes with pre-wash only.

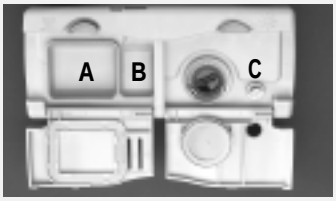

Check the rinse aid level

Mechanical indicator **C**.
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator **D**. Electric indicator on control panel (if provided).

Load the racks

Refer to the dishwasher loading instructions.

Close the dishwasher door, turn on the water tap

Select a programme

Select the desired programme.
The corresponding indicator lamp comes on.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

"Change programme"
- Press the START button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the START button again.

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

Only after the START button has switched off: Access the knob (in case of retractable knob, press and then release the knob).

Turn off the water tap, unload the racks

To accelerate the drying process, slightly open the door at the end of the program.
WARNING: WHEN THE DOOR IS OPENED STEAM COMES OUT!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

depending on the model

Multi-purpose support (A): [1)]
Depending on the position, for long-handles utensils, cups and glasses. May be used in three different positions.

Crockery holders (B):
Depending on the position, for example plates, cups and long-stemmed glasses.

Revolving glass support (C): [2)]
Depending on the position, for example small or long-stemmed glasses.

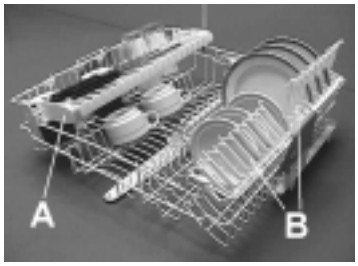

Half Load:

Load the upper rack **only**.

Place the cutlery basket (**D**) in the upper rack.

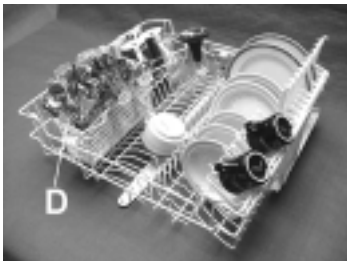

Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the **two** rack handles outwards (**E**) and lower the rack.
- **Upper adjustment:** pull the **two** handles (**E**) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

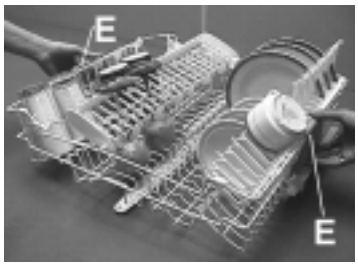

Lower rack:

Depending on the model with fixed or tilting plate holders (**F**).

Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.

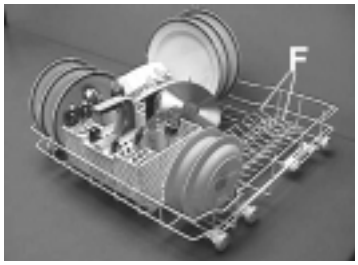

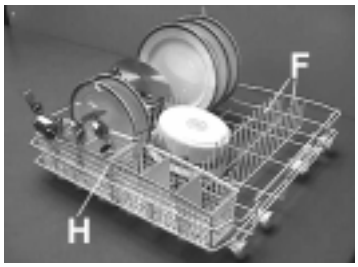

Cutlery basket (G) or (H):

Some models are provided with a grid (**I**) that can be fitted onto the cutlery basket to keep items separated. Cutlery basket (**D**) for appliances with half load only. Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

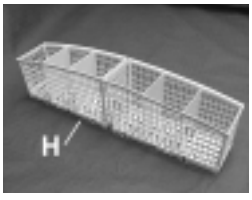

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

Spare parts which are sold separately:

[1)] Multi-purpose support (A) - N. AMH 369 series.

[2)] Revolving glass support (C) - N. WGH 1000 series.

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	• No water supply.	• Open the tap.
	• The appliance does not load sufficient water.	• Clean the water supply tap filter. • Ensure there are no kinks in the water hose.
	• There is a power failure.	• Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the domestic circuit fuse.
	• Starting the selected programme.	• The programme can be set to “0” to start.
If crockery is not perfectly dry	• Insufficient rinse aid.	• Increase dosage *.
	• Residual water in cavities.	• Load crockery at an angle.
If crockery is not perfectly clean	• The water jet does not reach the crockery.	• Arrange crockery so that items do not touch each other. Load crockery upside down.
	• Insufficient detergent.	• Follow recommended detergent dosage.
	• Unsuitable programme.	• Select a more intense wash cycle.
	• Spray arms blocked.	• The spray arms must be able to turn freely.
	• Spray arm nozzles clogged.	• Remove any impurities obstructing the water flow *.
	• Incorrect detergent/detergent too old.	• Use a good quality detergent.
Sandy or grainy residues	• Clogged filters.	• Check filters regularly/if necessary clean *.
	• Filters incorrectly assembled.	• Insert the filter correctly *.
Colour of plastic parts faded	• Tomato/carrot juice,...	• Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
• removable	• Streaks on the crockery/glasses.	• Increase the rinse aid dosage *.
	• Streaks on glasses.	• Reduce the rinse aid dosage *.
	• Layer of salt on crockery/glasses.	• Close the salt container lid properly *.
• not removable	• Insufficient water softening, calcium deposits.	• Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	• Cannot be washed in the dishwasher.	• Use suitable glasses.
Rust on cutlery	• Not made of stainless steel.	• Use suitable cutlery.
Identifying appliance faults	• The START indicator lamp flashes.	• Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.
	• Indicator F... (if provided).	• Call the After-Sales Service.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

(D) (CH) (A)

Montageanweisung

Einbaumodell
Gerät muß während der Montage spannungsfrei sein!
Siehe auch Gebrauchsanweisung!
Montageanweisung bitte aufbewahren! Technische Änderungen vorbehalten!

(GB) (AUS)

Installation instructions

Built-in model
During installation the appliance must not be connected to power supply!
Also see the instructions for use!
Please keep the installation instructions in a safe place! Subject to technical alterations.

(F) (B) (CH)

Instructions de montage

Appareil encastrable
L'appareil ne doit pas être sous tension durant le montage!
Voir également le mode d'emploi!
Conserver les instructions de montage! Sous réserve de modifications techniques.

(NL) (B)

Montage-instrukties

Inbouwmodel
Het apparaat mag tijdens de montage niet op het elektrische net zijn aangesloten!
Zie ook de gebruiksaanwijzing!
Montage-instrukties bewaren a.u.b.! Technische veranderingen voorbehouden.

(E)

Instrucciones para el montaje

Modelo de empotrar
¡Durante la operación de montaje del aparato no tiene que haber corriente!
¡Véanxe también las instrucciones para el uso!
¡Guardar las instrucciones para el montaje! Posibilidad de modificaciones técnicas.

(P)

Instruções para a montagem

Modelo de encaixe
Quando se proceder à montagem do aparelho a corrente terá que estar desligada!
Consultar também as instruções de uso!
Conserve as instruções para a montagem! Possibilidade de eventuais modificações técnicas.

(I) (CH)

Istruzioni per il montaggio

Modello da incasso
Durante l'operazione di montaggio dell'apparecchio non deve esserci corrente!
Vedere anche le istruzioni di impiego!
Conservare le istruzioni per il montaggio! Con riserva di introdurre modifiche tecniche.

(GR)

Οδηγίες για το μοντάρισμα

Μοντελο εγκατάστασης
Κατά την διάρκεια της εγκατάστασης η συσκευή δεν πρέπει να είναι στο ρεύμα!
Επίσης δείτε τις οδηγίες χρήσης!
Διατηρείστε τις οδηγιές μονταρίσματος! Διατηρούμε το δικαίωμα να εισάγουμε τεχνικές αλλαγές.

1

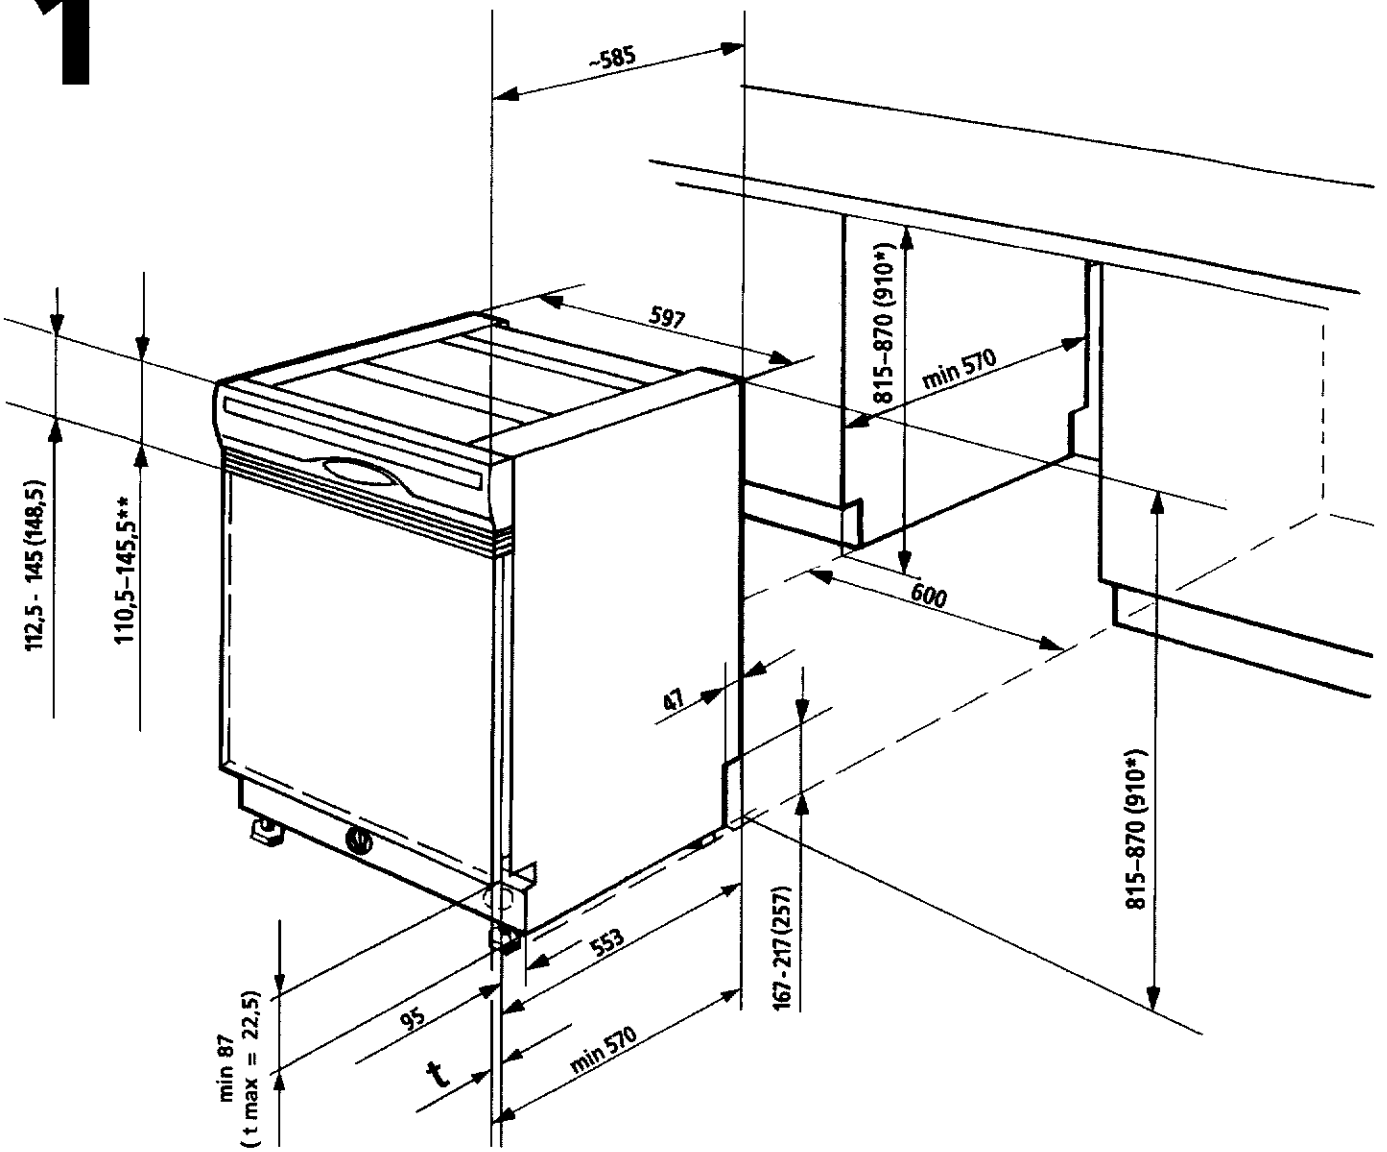

Ⓓ *Für Einbauhöhen größer als 870 mm benötigen Sie: Überlange Füße. Dieses Zubehör erhalten Sie im Fachhandel oder beim Kundendienst.

ⒼⒷ *For installations taller than 870 mm a set of longer feet is required. These are available from specialised retailers or from the After-Sales Service.

Ⓕ *Pour des hauteurs supérieures á 870 mm, un kit: Pieds surlongs est nécessaire. Vous les trouverez dans les magasins spécialisés ou auprès du Service Après-Vente.

Ⓝⓛ *Bij een inbouwruimte met een hoogte van meer dan 870 mm is er een set extra lange voeten nodig. Deze set is verkrijgbaar bij de vakhandel of bij de Servicedienst.

Ⓔ *Para instalar a una altura superior a 870 mm es necesaria una serie de pies más largos que se pueden solicitar a los distribuidores especializados o bien al Servicio Asistencia.

Ⓟ *Para instalações com alturas superiores a 870 mm., é necessária uma série de pezinhos mais compridos, disponiveis junto aos revendedores especializados ou no Serviço de Assistência Técnica.

Ⓘ *Per installazioni con altezze superiori agli 870 mm è necessaria una serie di piedini più lunghi disponibili presso i rivenditori specializzati oppure presso il Servizio Assistenza.

Ⓖⓡ *Για εγκαταστάσεις ύψους μεγαλύτερου από 850 χιλιοστά είναι απαραίτητε μια σειρά από πιο μακριά ποδαράκια που είναι διαθέσιμα στα ειδικά μαγαζιά ή στην Τεχνική μας Βοήθεια.

Ⓓ **Nur Gültig für Geräte mit Design: Flache Bedienblende

ⒼⒷ **Only valid for appliances with design: flat panel

Ⓕ **Seulement valable pour appareils avec Design: Bandeau de commandes plat

Ⓝⓛ **Alleen van toepassing bij apparaten met het design: "vlak bedieningspaneel"

Ⓔ **Válido solamente para lavavajillas con diseño: Panel plano

Ⓟ **Válido apenas para máquinas de lavar loiça com design: Painel plano

Ⓘ **Valido solo per lavastoviglie con design: Pannello piatto

Ⓖⓡ **Ισχύει μόνο για συσκευές με σχεδιασμό: επίπεδο ταμπλό.

2

(D) Schutz gegen feuchten Dampf.
(GB) Protection against damp steam.
(F) Protection contre vapeur humide.
(NL) Bescherming tegen stoom.
(E) Protección contra vapores.
(P) Proteger dos vapores.
(I) Protezione dai vapori.
(GR) Προστασία από ατμούς.

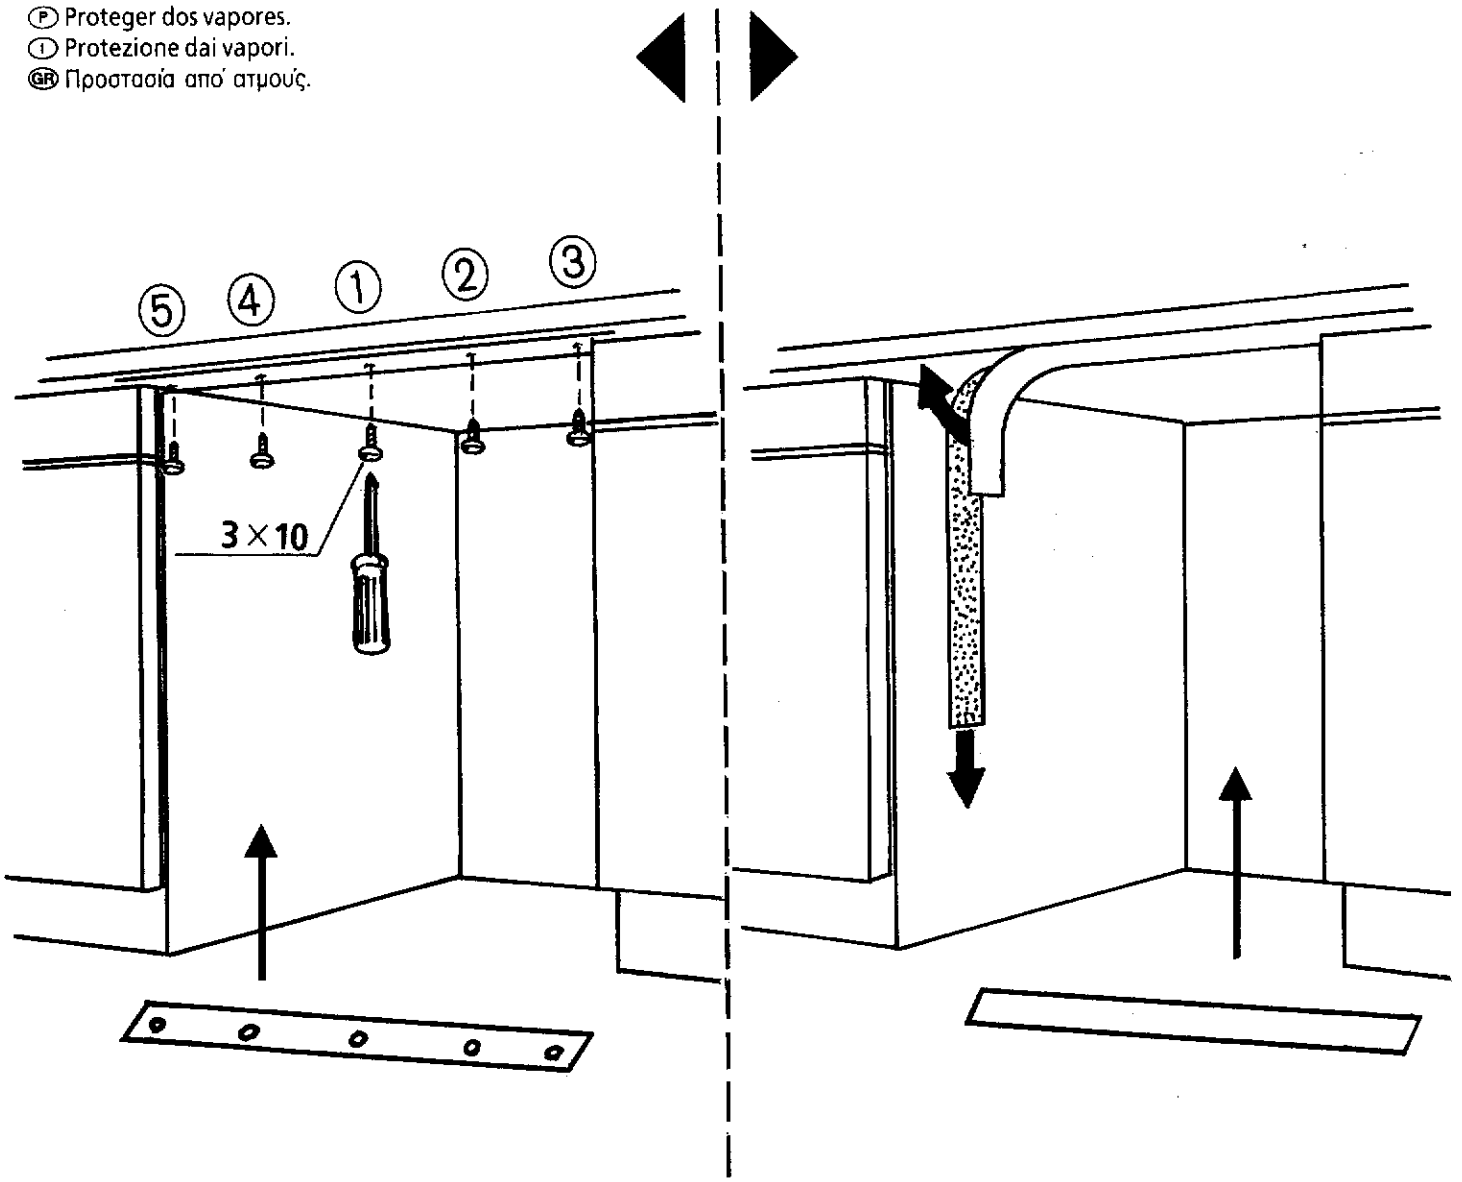

3

Ⓓ Zulaufschlauch fest und dicht mit Wasseranschluß verbinden!
ⒼⒷ Tightly fit the inlet to the water tap!
Ⓕ Raccorder le tuyau d'alimentation de façon solide et étanche au robinet d'eau!
Ⓝⓛ Sluit de toeveorslang stevig aan op de waterkraan!
Ⓔ ¡Conectar fuertemente el tubo de alimentación a la conexión del agua!
Ⓟ Ligar estritamente o tubo de alimentação á ligação da água!
Ⓘ Collegare strettamente il tubo di alimentazione all'allacciamento dell'acqua!
ⒼⓇ Συνδέστε ερμητικά το σωλήνα τροφοδοσίας στην βρύση.

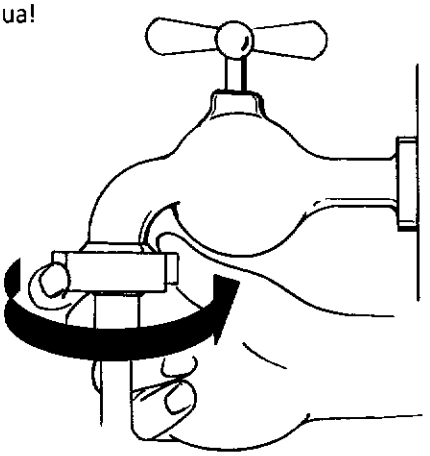

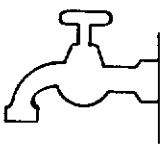

P = 0,3–10 bar
(0,03–1,0 MPa)

Ⓓ Wasseranschluß je nach Ausführung:
ⒼⒷ Water connection – depending on the model:
Ⓕ Raccordement hydraulique, suivant le modèle:
Ⓝⓛ Wateraansluiting, verschillend per uitvoering:
Ⓔ Conexión hidráulica – según el modelo:
Ⓟ Ligação hidráulica – segundo o modelo:
Ⓘ Collegamento idraulico – secondo il modello:
ⒼⓇ Υδραυλική σύνδεση – ανάλογα με το μοντέλο:

Ⓓ Standard
ⒼⒷ Standard
Ⓕ Standard
Ⓝⓛ Standaard
Ⓔ Estándar
Ⓟ Padronizado
Ⓘ Standard
ⒼⓇ Στάνταρ

Ⓓ Wasserstopsysteme
ⒼⒷ Water stop system
Ⓕ Système Wasserstop
Ⓝⓛ Waterstopsysteem
Ⓔ Sistema agua stop
Ⓟ Sistema de interrupção da água (água -stop)
Ⓘ Sistema acqua-stop
ⒼⓇ Σύστημα σταματήματος του νερού

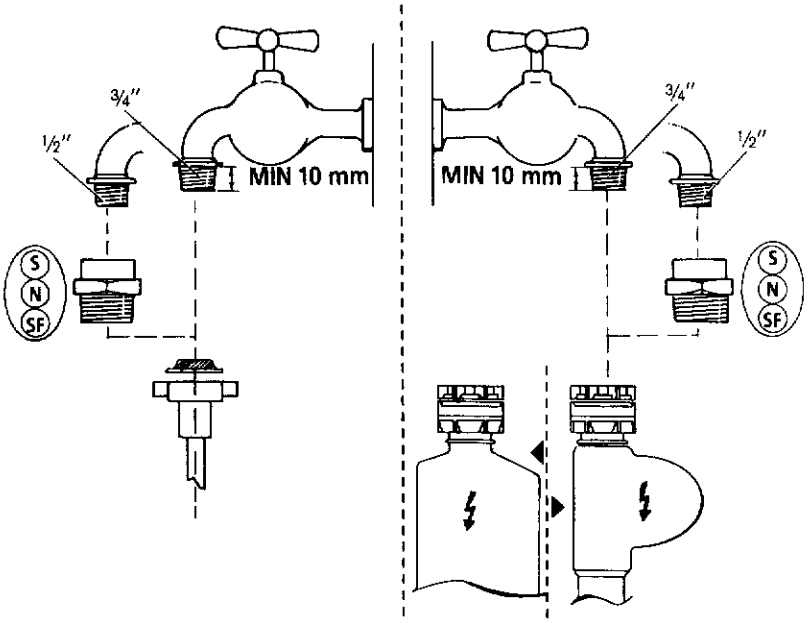

Ⓓ Sofern vorhanden: Einbaulage Wasserstop beliebig!
ⒼⒷ If provided, you can position the water stop according to your requirements!
Ⓕ S'il existe: Installer l' Acqua-Stop dans l'encastrement suivant la nécéssité!
Ⓝⓛ Indien aanwezig kunt u desgewenst de waterstop monteren!
Ⓔ ¡Si disponible: montar el Dispositivo Agua Stop, segúa necessidade!
Ⓟ Se disponível: Instalar el dispositivo água-stop, como necessário!
Ⓘ Se disponibile: posizionare il dispositivo Acqua-stop, secondo necessità!
ⒼⓇ Αν είναι διαθέσιμο: τοποθετείστε το acqua-stop στην θέση που προτιμάτε!

4

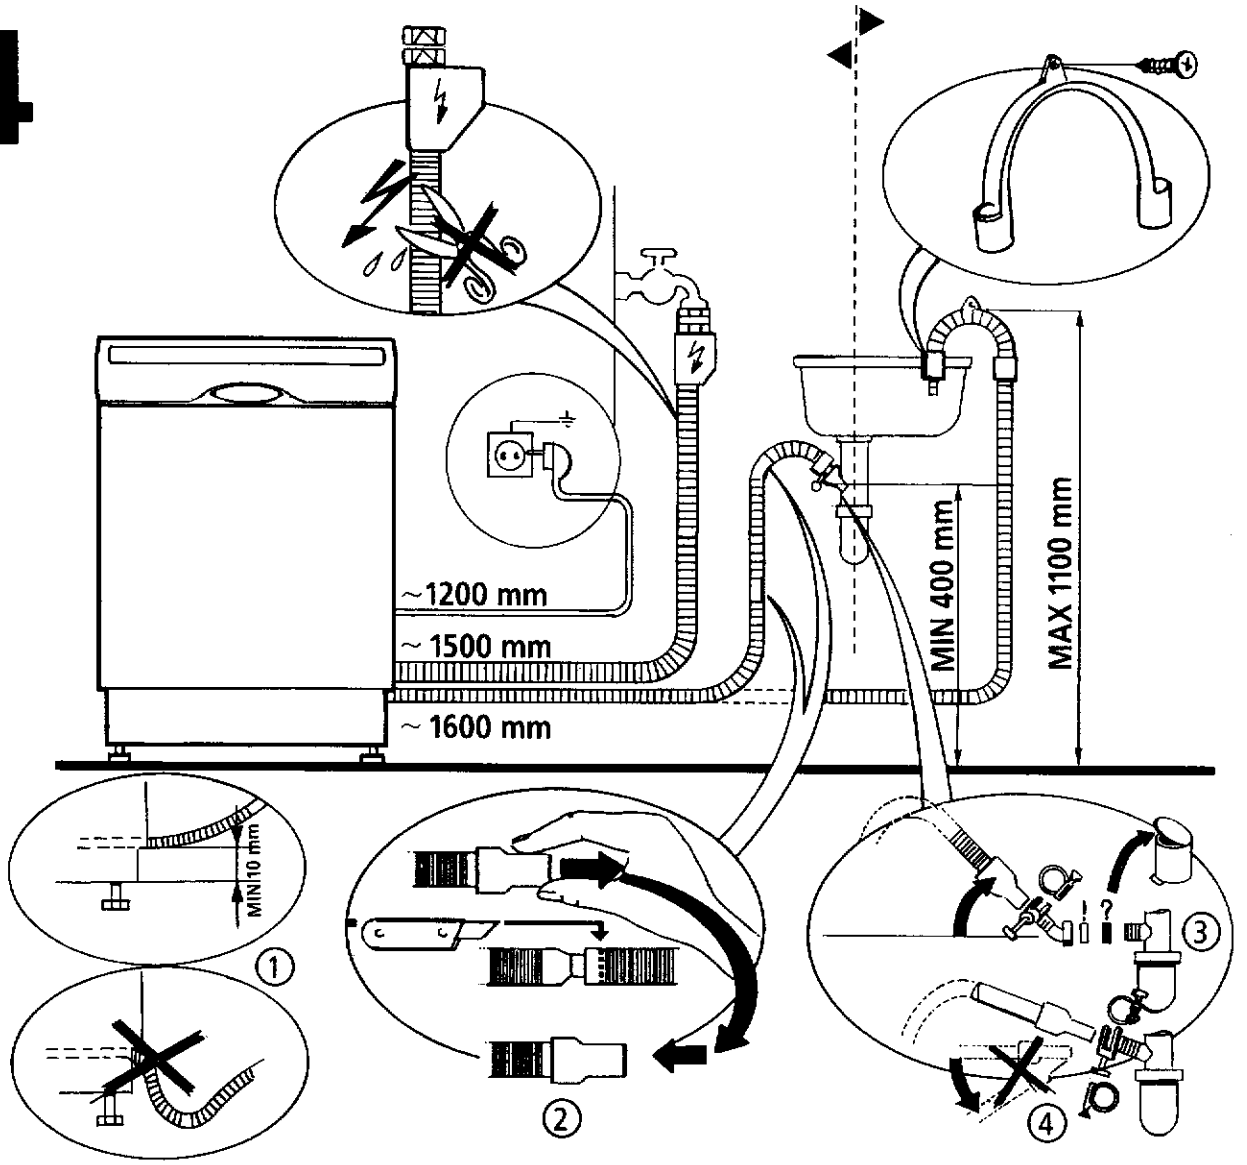

① Ⓓ Ablaufschlauch aufsteigend verlegen!
ⒼⒷ The outlet hose should point upward!
Ⓕ Faire monter le tuyau de vidange!
Ⓝⓛ Leg de afvoerslang in stijgende richting aan!
Ⓔ ¡Instalar el tubo de desagüe con la inclinación necesaria!
Ⓟ Instalar o tubo de descarga com a inclinação necessária!
Ⓘ Installare il tubo di scarico con la necessaria inclinazione!
ⒼⓇ Εγκαταστείστε τον σωλήνα εξοδου προς τα πάνω!

② Ⓓ Wenn nötig, Ablaufschlauch an markierten Stellen kürzen.
ⒼⒷ If the outlet hose ist too long, cut it where it is marked.
Ⓕ Si nécessaire, raccourcir le tuyau de vidange aux endroits marqués.
Ⓝⓛ Als de afvoerslang moet worden ingekort dan kunt u deze door de gemarkeerde punten afsnijden.
Ⓔ Si fuera necesario, acortar el tubo de desagüe en los puntos marcados.
Ⓟ Se for necessário, encurtar o tubo de descarga nos pontos marcados.
Ⓘ Se necessario, accorciare il tubo di scarico nei punti contrassegnati.
ⒼⓇ Αν είναι απαραίτητο, κόψτε τον σωλήνα εξοδου στα σημεία που είναι σημειωμένα.

③ Ⓓ Abfluß muß frei sein!
ⒼⒷ Make sure drained water flows away freely!
Ⓕ L'eau de vidange doit s'écouler librement!
Ⓝⓛ De afvoer moet open zijn!
Ⓔ ¡Dejar el desagüe libre!
Ⓟ Manter o tubo de descarga livre!
Ⓘ Lasciare libero lo scarico!
ⒼⓇ Αφήστε ελευθερο το νερό εξοδου.

④ Ⓓ Ablaufschlauch mit Schelle sichern.
ⒼⒷ Fasten the outlet hose with a clamp.
Ⓕ Fixer le tuayau de vidange par un croche.
Ⓝⓛ Breng een pakkingsring aan op de afvoerslang.
Ⓔ Asegurar la estanqueidad del tubo de desagüe montando un collarín.
Ⓟ Garantir a estanqueidade do tubo de descarga montando uma faixa.
Ⓘ Assicurare la tenuta del tubo di scarico montandovi una fascetta.
ⒼⓇ Σφίξτε τον σωλήνα εξοδου με ένα δακτυλιο.

5

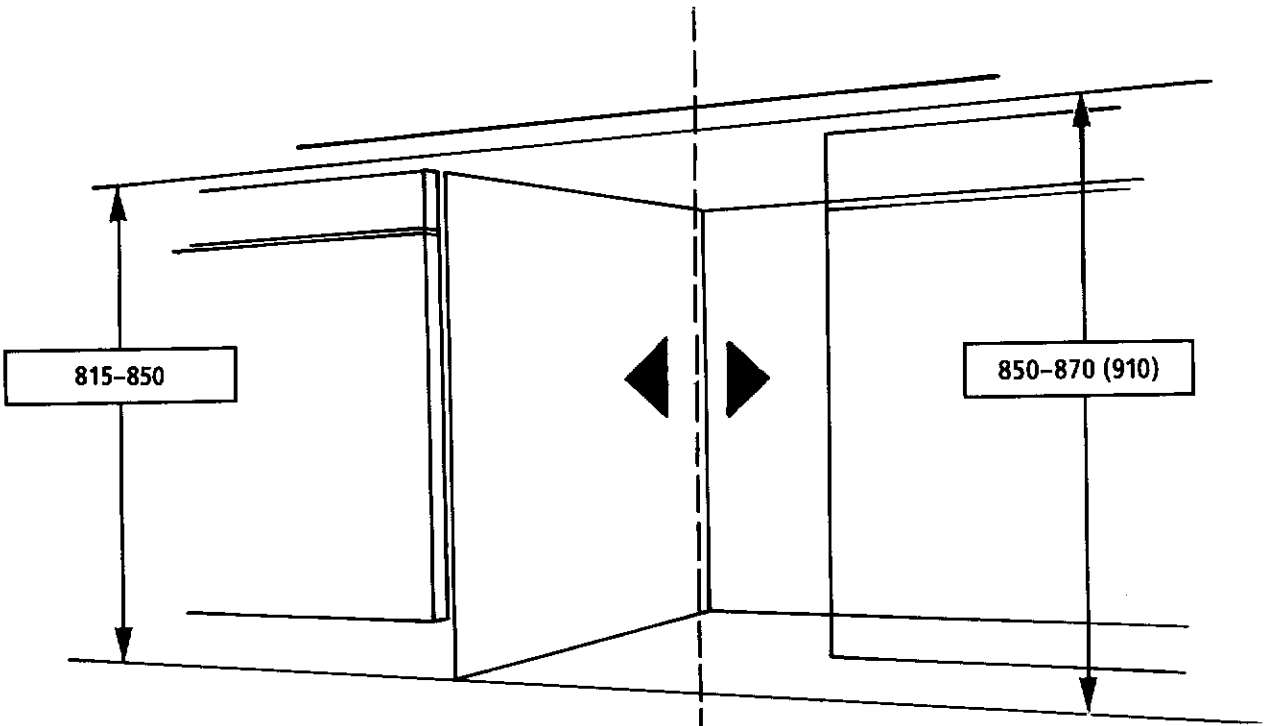

815–850

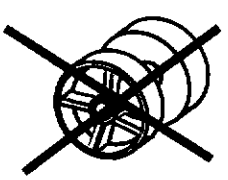

Ⓓ Montage ohne Rolle – nächster Schritt: 6
Ⓖ Assembly without casters – next step: 6
Ⓕ Montage sans roulettes – étapes suivante: 6
Ⓝ Montage zonder wieltje – volgende handeling: 6
Ⓔ Montaje sin rueda – fase siguiente: 6
Ⓟ Montagem sem rodela – fase sucessiva: 6
Ⓘ Montaggio senza rotella – fase successiva: 6
Ⓖ Μοντάρισμα χωρίς τροχό – επόμενη φάση: 6

850–870 (910)

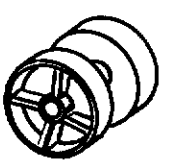

Ⓓ Montage mit Rolle – zusätzliche Schritte: 5.1–5.4
Ⓖ Assembly with casters – extra steps: 5.1–5.4
Ⓕ Montage avec roulettes – étapes supplémentaires: 5.1–5.
Ⓝ Montage net wieltje – extra handelingen: 5.1–5.4
Ⓔ Montaje con rueda – fases adicionales: 5.1–5.4
Ⓟ Montagem com rodela – fases adicionais: 5.1–5.4
Ⓘ Montaggio con rotella – fasi aggiuntive: 5.1–5.4
Ⓖ Μοντάρισμα με τροχό – επιπρόσθετες φάσεις: 5.1–5.4

5.1+

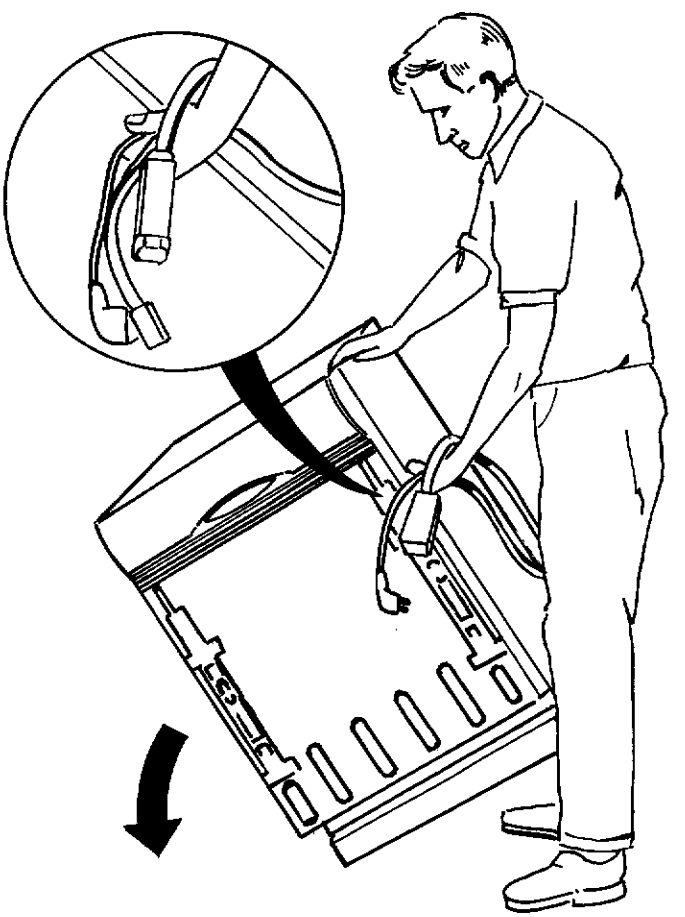

Ⓓ Gerät vorsichtig auf linke Seite legen.
ⒼⒷ Carefully lie the appliance on its left side.
Ⓕ Coucher délicatement la machine sur la flanc gauche.
ⓃⓁ Leg het apparaat voorzichtig op zijn linkerkant.
Ⓔ Apoyar el aparato con cuidado sobre el lado izquierdo.
Ⓟ Apoiar o electrodoméstico com cuidado no lado esquerdo.
Ⓘ Appoggiare l'elettrodomestico con cautela sul lato sinistro.
ⒼⓇ Τοποθετείστε προσεκτικά την συσκευή στο αριστερό της πλευρό.

5.2+

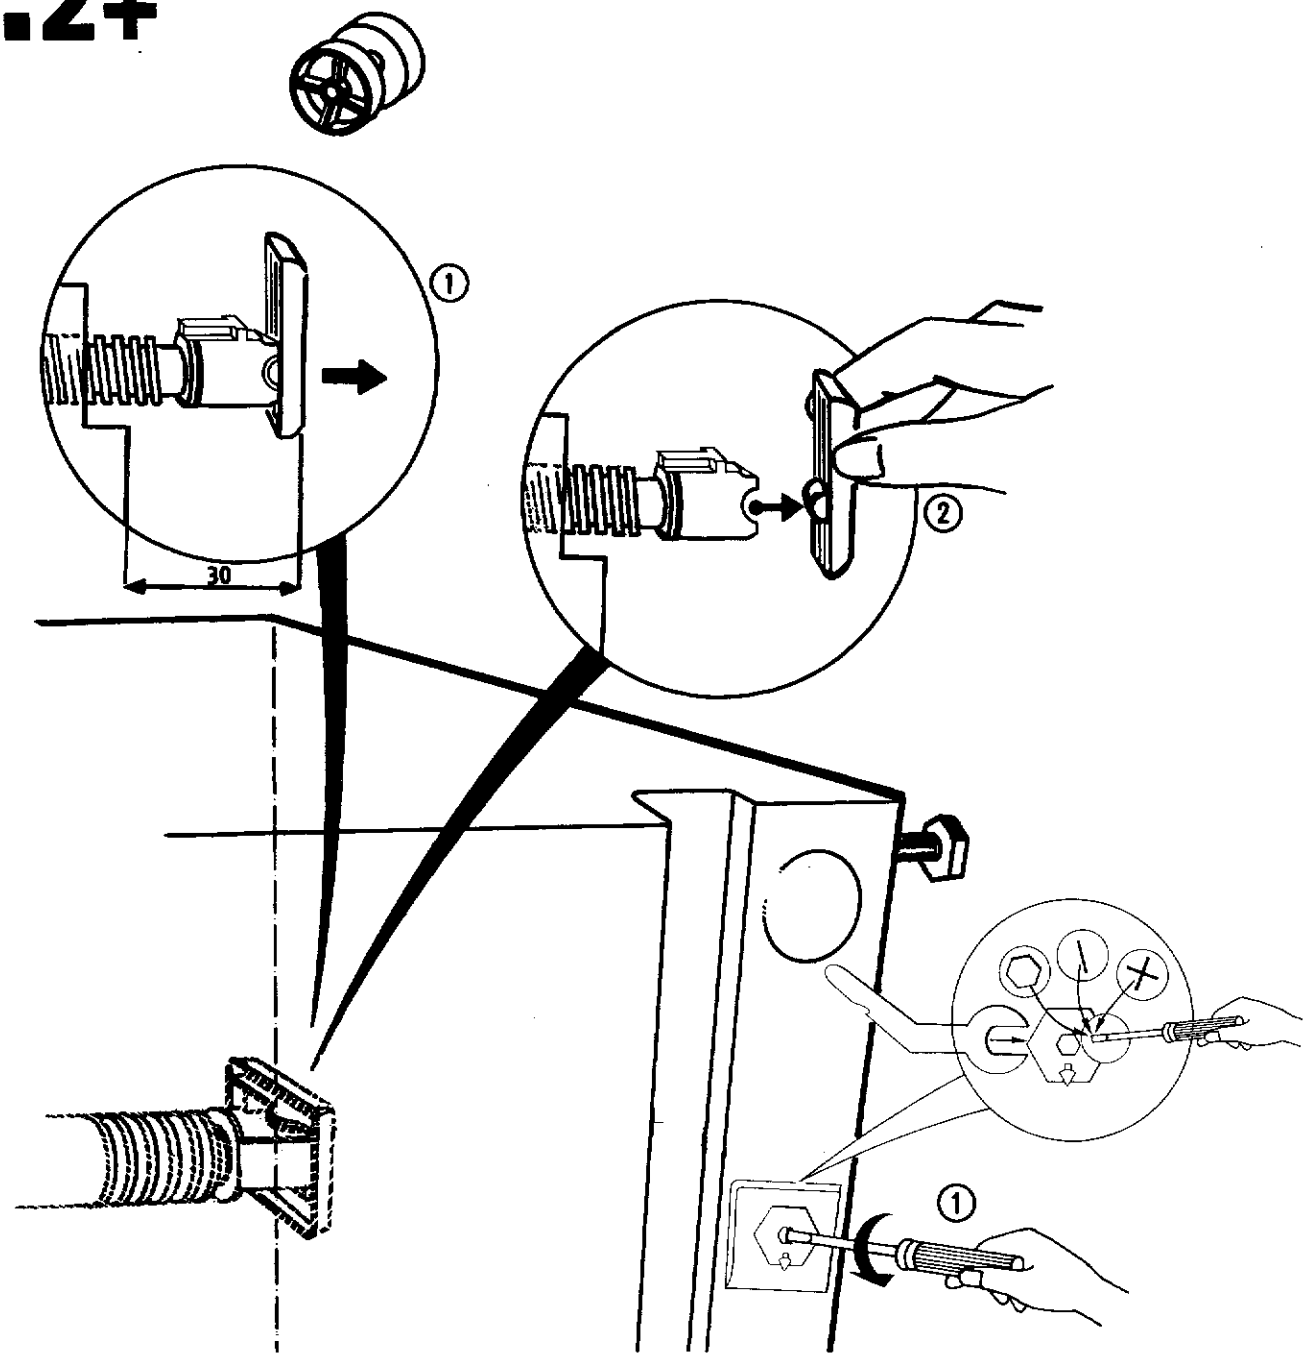

①

(D) Schraube nach links drehen.
Fuß hinten kommt hervor: mindestens 30 mm!
Beim Einsatz eines Elektroschraubers: geringe Drehzahl verwenden!

(GB) Turn the screw to the left.
The back foot comes out: at least 30 mm!
When using an electric screwdriver use low speed.

(F) Donner un tour de vis vers la gauche.
Le pied arrière sort au moins 30 mm.
Si l'on utilise un tourne-vis électrique, utiliser un numéro de tours bas.

(NL) Draai de schroef tegen de klok in.
Het achterste voetje komt naar voren: minstens 30 mm!
Bij gebruik van een elektrische schroevedraaier: Kies een lage snelheid!

(E) Girar el tornillo hacia la izsquierda.
El pie trasero sobresale por lo menos 30 mm.
En caso de que se use un atornillador eléctrico: utilizar un número bajo de revolusiones.

(P) Rodar o parafuso para a esquerda.
O pé posterior tem uma saliência de pelo menos 30 mm!
Se se utilizar uma chave de parafusos eléctrica: utilizar um número baixo de rotaçoes.

(I) Ruotare la vite verso sinistra.
Il piedino posteriore fuoriesce di almeno 30 mm.
In caso di uso di un avvitatore elettrico: utilizzare un basso numero di giri.

(GR) Γυρίστε τις βίδες προς τα αριστερά.
Το πίσω ποδαράκι ξεπροβάλλει για 30 χιλ. τουλάχιστον.
Αν χρησιμοποιείτε ηλεκτρικό κατσαβίδι: χρησιμοποιείστε χαμηλό αριθμό στροφών.

5.3+

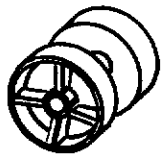

① + ②

Ⓓ Kleines Teil aus Rolle ausbrechen.
ⒼⒷ Break off a small part from the caster.
Ⓕ Extraire de la roulette la petite pièce.
Ⓝⓛ Breek het kleine onderdeel uit het wiel.
Ⓔ Sacar de la rueda la pieza de pequeñas dimensiones.
Ⓟ Retitar da rodela o pormenor de pequenas dimensões.
Ⓘ Togliere dalla rotella il particolare di piccole dimensioni.
ⒼⓇ Κόψτε από τον δίσκο το συγκεκριμένο μικρών διαστάσεων.

③

Ⓓ Kleines Teil einsetzen.
ⒼⒷ Insert the small part.
Ⓕ Introduire la petite pièce.
Ⓝⓛ Zet het kleine onderdeel in.
Ⓔ Insertar la pieza.
Ⓟ Introduzir o pormenor.
Ⓘ Inserire il particolare.
ⒼⓇ Εισχωρείστε το συγκεκριμένο.

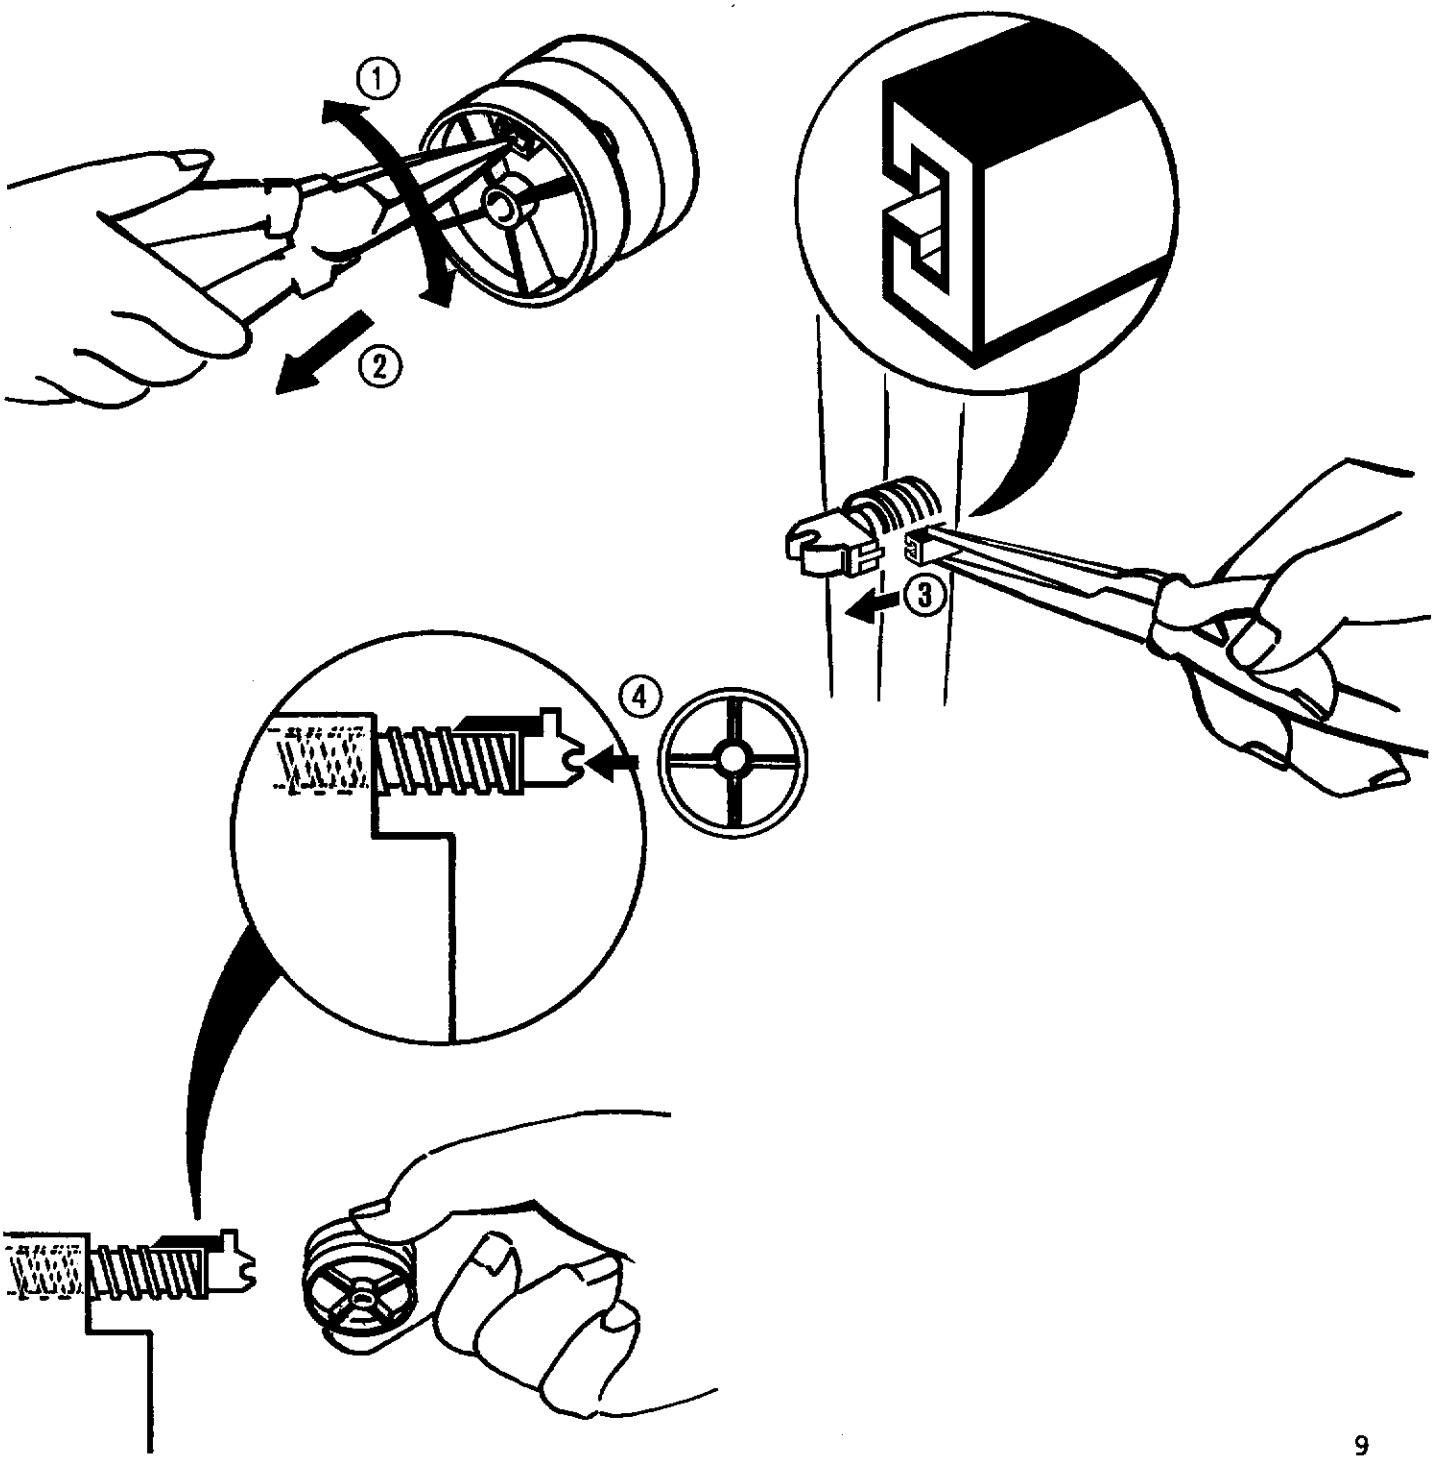

5.4+

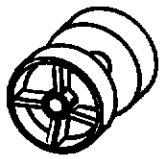

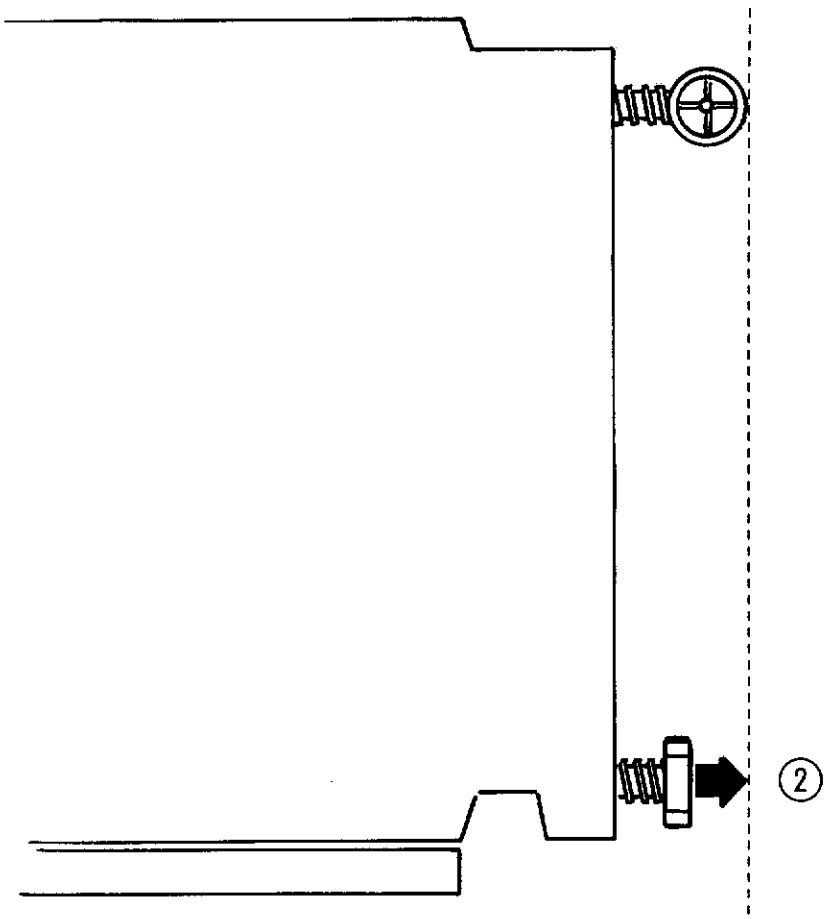

①

Ⓓ Nur bei Einbauhöhen größer als 870 mm: Vordere Füße ausbauen und durch überlange Füße ersetzen.
ⒼⒷ Only for installations taller than 870 mm: Disassemble the front feet and replace them with longer feet.
Ⓕ Seulement pour des hauteurs supérieurs à 870 mm: démonter les pieds avant et les remplacer par les pieds surlongs.
ⓃⓁ Alleen bij een inbozwhoogte van meer dan 870 mm: Demonteer de voeten aan de voorkant en vervang deze door extra lange voeten.
Ⓔ Sólo en caso de instalar con una altura superior a 870 mm: Desmontar los pies anteriores y sustituirlos con pies más largos.
Ⓟ Apenas para instalações com alturas superiores a 870 mm: Desmonte os pezinhos anteriores substituindo-os com pezinhos mais compridos.
Ⓘ Solo per installazioni con altezze superiori agli 870 mm: Smontare i piedini anteriori e sostituirli con piedini più lunghi.
ⒼⓇ Μόνο για εγκαταστάσεις ύψους μεγαλύτερου από 870 χιλιοστά. Βγάλτε τα μπροστινά ποδαράκια και αντικαταστείστε τα με πιο μακριά ποδαράκια.

②

Ⓓ Füße auf ein Niveau einstellen!
ⒼⒷ Level the feet!
Ⓕ Mettre les pieds à niveau!
ⓃⓁ Zet de voetjes gelijk!
Ⓔ ¡Regular los pies a la misma altura!
Ⓟ Regular os pés na mesma altura!
Ⓘ Regolare i piedini alla stessa altezza!
ⒼⓇ Ρυθμίστε τα ποδαράκια στο ίδιο ύψος.

③

Ⓓ Gerät aufrecht stellen.
ⒼⒷ Put the appliance upright.
Ⓕ Remettre la machine verticalement.
ⓃⓁ Zet het apparaat rechtop.
Ⓔ Poner el aparato en posición vertical.
Ⓟ Colocar o electrodoméstico em posição vertical.
Ⓘ Mettere l'elettrodomestico in posizione verticale.
ⒼⓇ Τοποθετείστε την συσκευή σε κάθετη θέση.

6

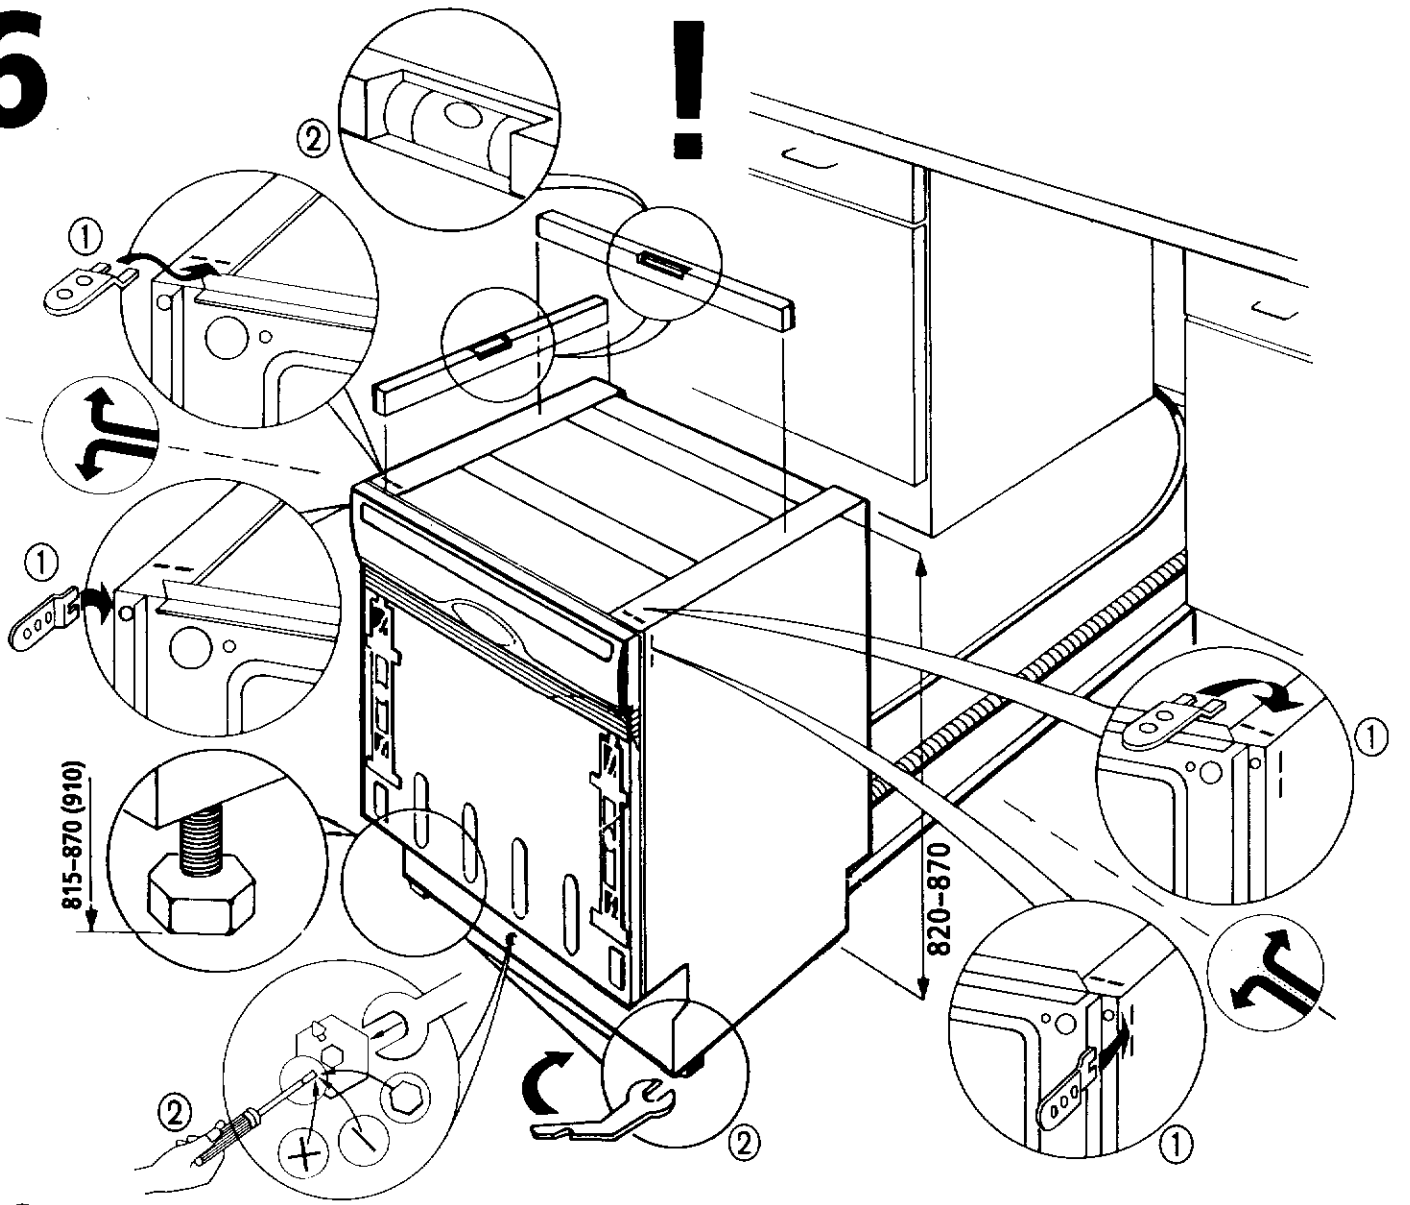

②

Ⓓ Beim Einsatz eines Elektroschraubers: geringe Drehzahl verwenden!

ⒼⒷ When using an electric screwdriver use low speed.

Ⓕ Si l'on utilise un tourne-vis électrique, utiliser un nombre de tours bas!

Ⓝⓛ Bij gebruik van een elektrische schroevedraaier: kies een lage snelheid!

Ⓔ En caso de que se use un atornillador eléctrico: utilizar un número bajo de revoluciones!

Ⓟ Se se utilizar uma chave de parafusos eléctrica: utilizar um número baixo de rotações!

Ⓘ In caso di uso un avvitatore elettrico: utilizzare un basso numero di giri!

ⒼⓇ Αν χρησιμοποιείτε ηλεκτρικό κατσαβίδι: χρησιμοποιείστε χαμηλό αριθμό στροφών.

③

Ⓓ Achtung bei unebener Aufstellfläche: Geschirrspüler mit weit herausgedrehten Füßen vorsichtig unter Arbeitsplatte schieben!

ⒼⒷ Be careful about irregular surfaces: Regulate the foot height. Push the dishwasher under the worktop!

Ⓕ Attention lorsque la surface de l'emplacement n'est pas plane: régler la hauteur des pieds. Glisser le lave-vaisselle au-dessous du plan de travail!

Ⓝⓛ Let op als de vloer niet vlak is: Schuif de afwasautomat met ver uitgedraaide voeten voorzichtig onder het aanrecht!

Ⓔ ¡Tener cuidado con superficies no regulares! Regular adecuadamente la altura de los pies. Introducir el lavavajillas debajo de la encimera de trabajo.

Ⓟ Preste atenção às superfícies irregulares! Ajuste adequadamente a altura dos pezinhos. Empurre a máquina de lavar loiça sob a superfície de trabalho.

Ⓘ Attenzione a superfici non regolari! Regolare adeguatamente l'altezza dei piedini. Spingere la lavastoviglie sotto il piano di lavoro.

ⒼⓇ Προσοχή στις μη ομαλές επιφάνειες! Ρυθμίστε όπως πρέπει το ύψος των ποδιών. Σπρώξτε το πλυντήριο κάτω από το επίπεδο εργασίας.

7

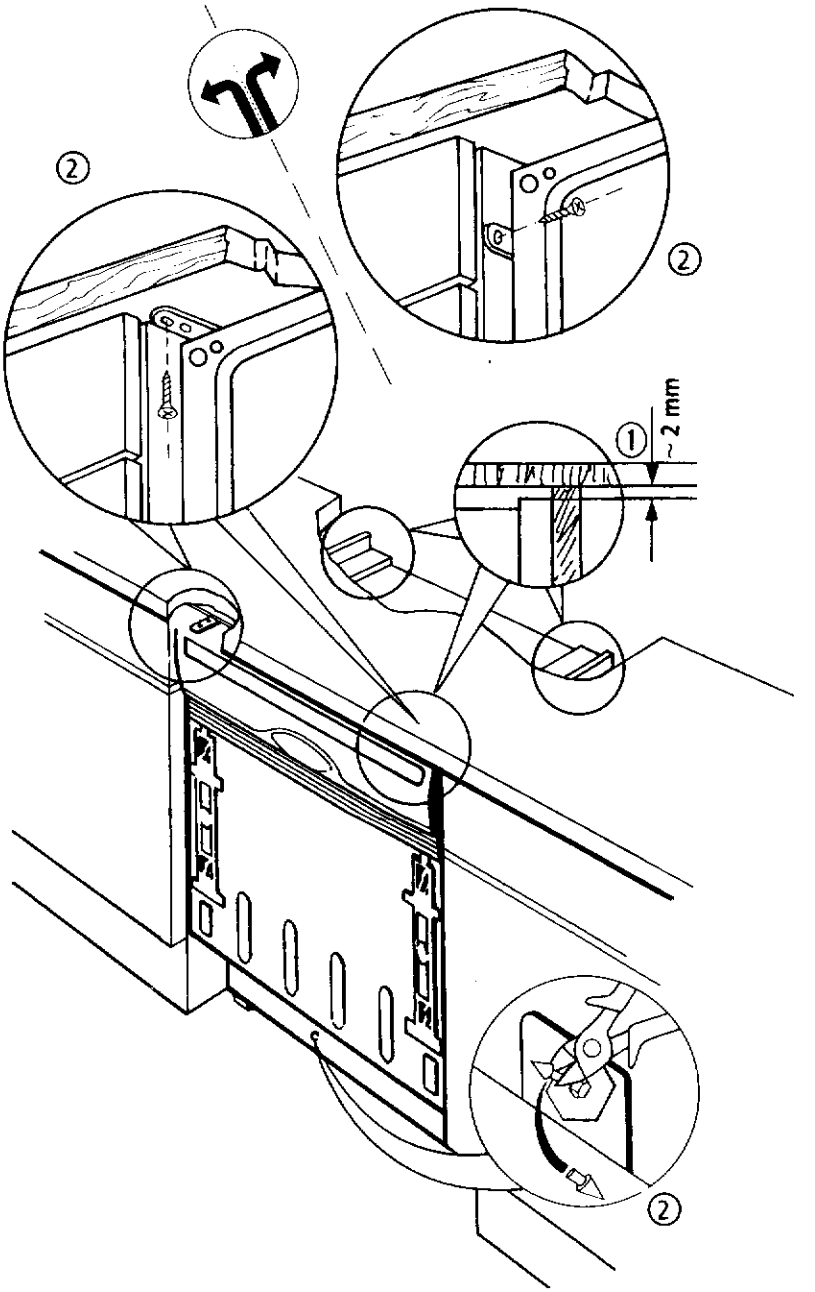

(1)

(D) Geschirrspüler nicht unter Arbeitsplatte klemmen!
Spalt vorsehen: max. = 2 mm, min. = 1 mm.
Fuß hinten: Verstellschraube im Sockel nach links drehen bis Rutschkupplung wirksam wird.
Dann 2 Umdrehungen zurück, nach rechts drehen.

(GB) Do not jam the dishwasher under the worktop!
Clearance: max. = 2 mm, min. = 1 mm.
Back foot: Turn the adjusting screw in the base until the slip coupling begins to operate.
Then turn back 2 turns to the right.

(F) Ne pas coller le lave-vaisselle sous le plan de travail.
Prévoir un espace: max. = 2 mm, min. = 1 mm.
Pied arrière: tourner la vis réglable qui se trouve dans la plinthe, vers la gauche jusqu'á sentir le couplage de glissement.
Revenir alors en arrière, vers la droite de 2 tours.

(NL) Klem de afwasmachine niet onder het aanrecht vast!
Laat een kleine gleuf open: max. = 2 mm, min. = 1 mm.
Achterste voetje: Draai de regelschroef aan het voetstuk tegen de klok in totdat het werkzaam wordt.
Vervolgens 2 slagen (met de klok mee) terugdraaien.

(E) No encaje el lavavajillas debajo de la superficie de trabajo. Prevea un espacio mínimo de 1 mm o bien máximo de 2 mm.
Pie trasero: gire hacia la izquierda el tornillo de regulación colocado en el zócalo hasta que permita la regulación del pie. Girar dos veces hacia la derecha.

(P) Não encaixar a máquina de lavar loiça por baixo da bancada de trabalho!
Prever um espaço no mínimo de 1 mm ou no máximo de 2 mm.
Pé posterior: rodar o parafuso de regulação do pé.
Rodar duas vezes para a direita.

(I) Non incastrare la lavastoviglie sotto il piano di lavoro.
Prevedere uno spazio minimo di 1 oppure massimo di 2 mm.
Piedino posteriore: ruotare verso sinistra la vite di regolazione posta nello zoccolo fino a che si attiva permettendo la regolazione del piedino.
Ruotare per due volte verso destra.

(GR) Μην μπλοκάρετε το πλυντήριο κάτω από το επίπεδο εργασίας.
Προβλέψτε ένα ελάχιστο ύψος 1 χιλ. ή μέγιστο 2 χιλ.
Πίσω ποδαράκι: γυρίστε προς τα αριστερά τις βίδες ρύθμισης που βρίσκονται στο πλαίσιο μέχρι να ενεργοποιηθούν επιτρέποντας την ρύθμιση του ποδιού.
Γυρίστε δυο φορές προς τα δεξιά.

8

① – ④

Ⓓ Leisten abnehmen.
ⒼⒷ Remove the frame.
Ⓕ Retirer les cadres.
Ⓝⓛ Verwijder de lijstjes.
Ⓔ Sacar las varillas soporte.
Ⓟ Tirar als tiras de suporte.
Ⓘ Togliere i listelli di supporto.
ⒼⓇ Βγαλτε το πλαίσιο.

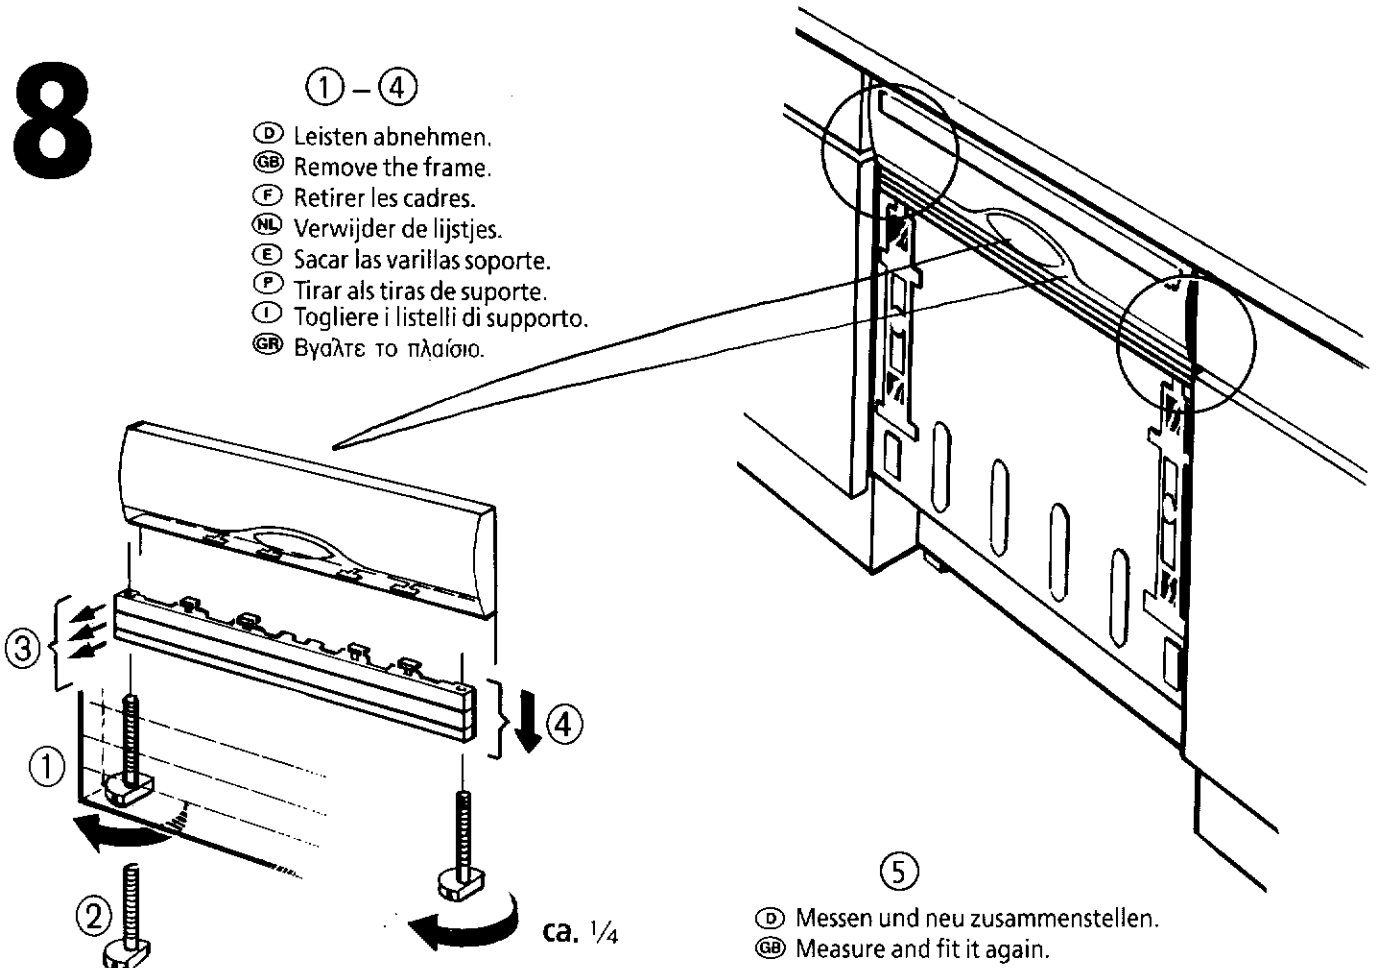

⑤

Ⓓ Messen und neu zusammenstellen.
ⒼⒷ Measure and fit it again.
Ⓕ Mesurer et assembler à nouveau.
Ⓝⓛ Nogmaals opmeten en in elkaar zetten.
Ⓔ Medir y volver a montar.
Ⓟ Medir e proceder de novo à montagem.
Ⓘ Misurare e montare di nuovo.
ⒼⓇ Μετρείστε και ξανατοποθετείστε.

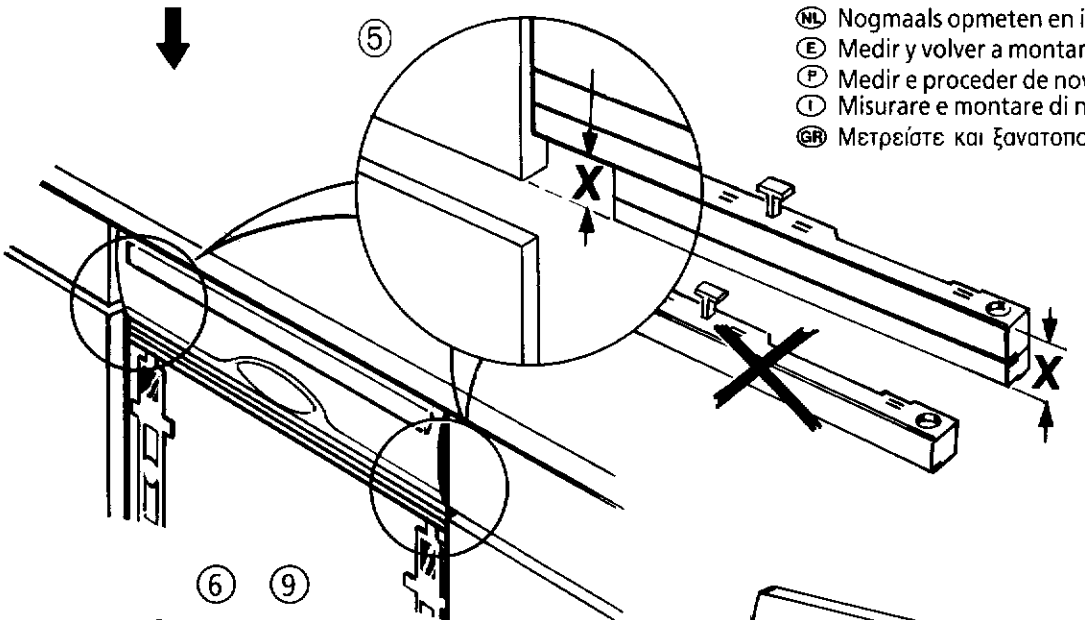

⑥ ⑨

Ⓓ Montieren
ⒼⒷ Assemble
Ⓕ Assembler
Ⓝⓛ Monteren
Ⓔ Montar
Ⓟ Proceder à montagem
Ⓘ Assiemare
ⒼⓇ Τοποθετείστε

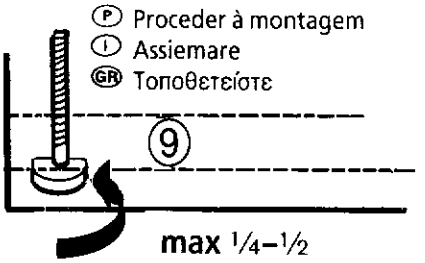

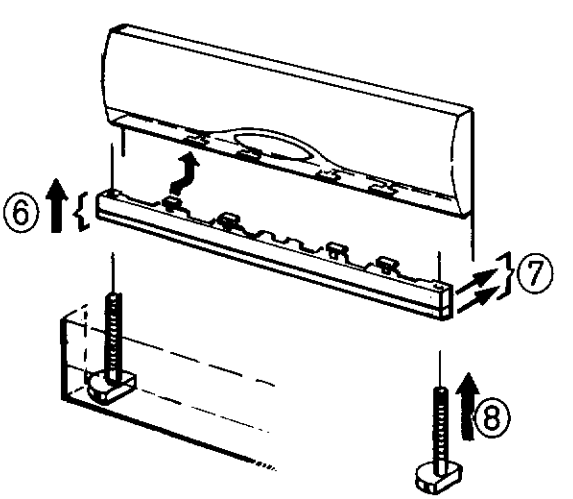

9

(D) Nur sofern nötig!
(GB) If necessary only!
(F) Seulement si nécessaire!
(NL) Allen wanneer dat nodig is!
(E) ¡Sólo si es necesario!
(P) Apenas se necessário!
(I) Solo se necessario!
(GR) Μόνο αν είναι απαραίτητο!

(D) Nicht gültig für Geräte mit Design: Flache Bedienblende
(GB) Not vailed for appliances with design: flat panel
(F) Non valable pour appareils avec Design: bandeau de commandes plat
(NL) Niet van toepassing bij apparaten met het design"vlak bedieningspaneel"
(E) No válido para lavavajillas con diseño: Panel plano
(P) Não válido para máquinas de lavar loiça com design: Painel plano
(I) Non valido per lavastoviglie con design: Pannello piatto
(GR) Δεν ισχύει για συσκευές με σχεδιασμό: επίπεδο ταμπλό

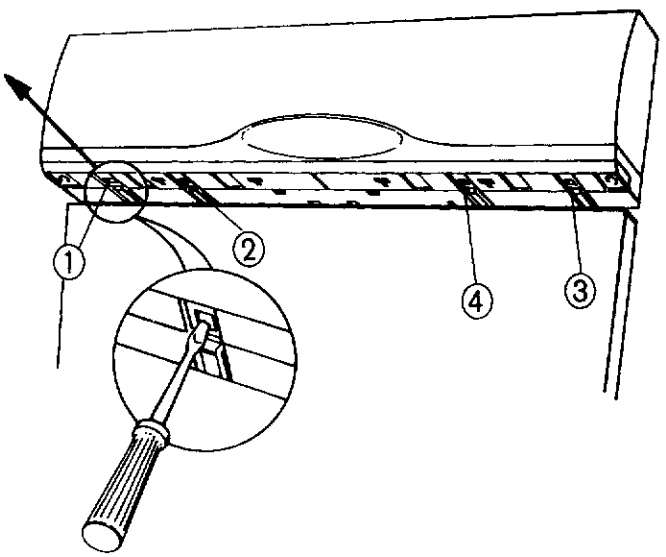

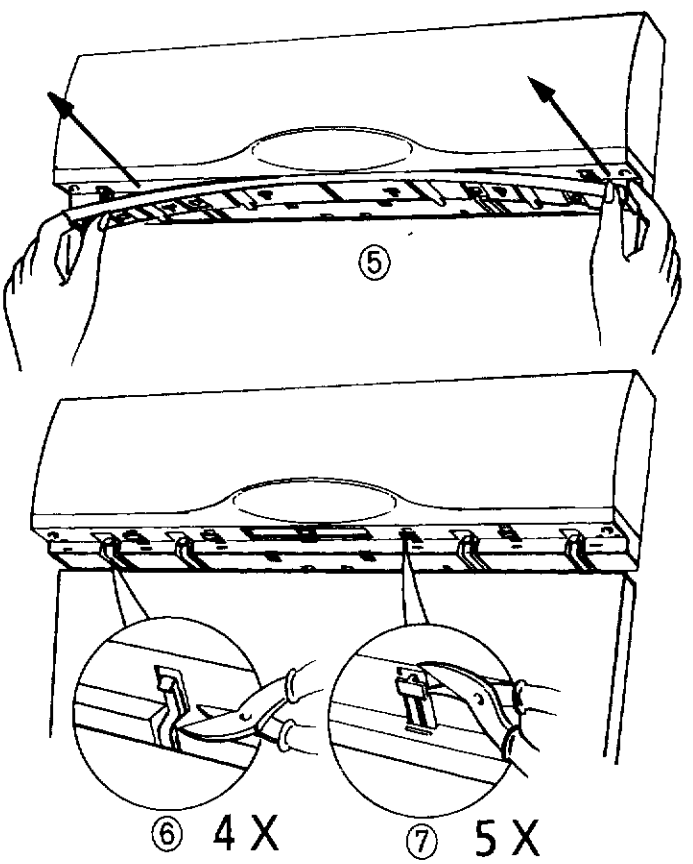

①–④ (D) Drücken und ziehen.
(GB) Press and pull.
(F) Appuyer et tirer.
(NL) Aandrukken en trekken.
(E) Pulsar y tirar.
(P) Carregar e tirar.
(I) Premere e tirare.
(GR) Πιέστε και τραβήξτε.

⑥–⑦ (D) Achtung: nach Abschneiden der Haken und Klipse erneute Montage der Leisten unmöglich!
(GB) Caution: after hooks and retainers have been cut, a new assembly is not possible!
(F) Attention: après suppression des crochets et des clips, un nouveau montage est impossible!
(NL) Opgelet: wanneer de haken en klemmen zijn afgesneden is opnieuw monteren onmogelijk!
(E) ¡Cuidado: una vez cortados el gancho y el clip es imposible repetir el montaje!
(P) Atenção: uma vez que o gancho e o clip tiverem sido cortados já não será possivel repetir a montagem!
(I) Attenzione: una volta tagliati gancio e clip è impossibile ripetere il montaggio!
(GR) Προσοχή: μετά το κόψιμο των γάντζων και των άγκιστρων, δεν μπορείτε να επαναλάβετε την τοποθέτηση!

10

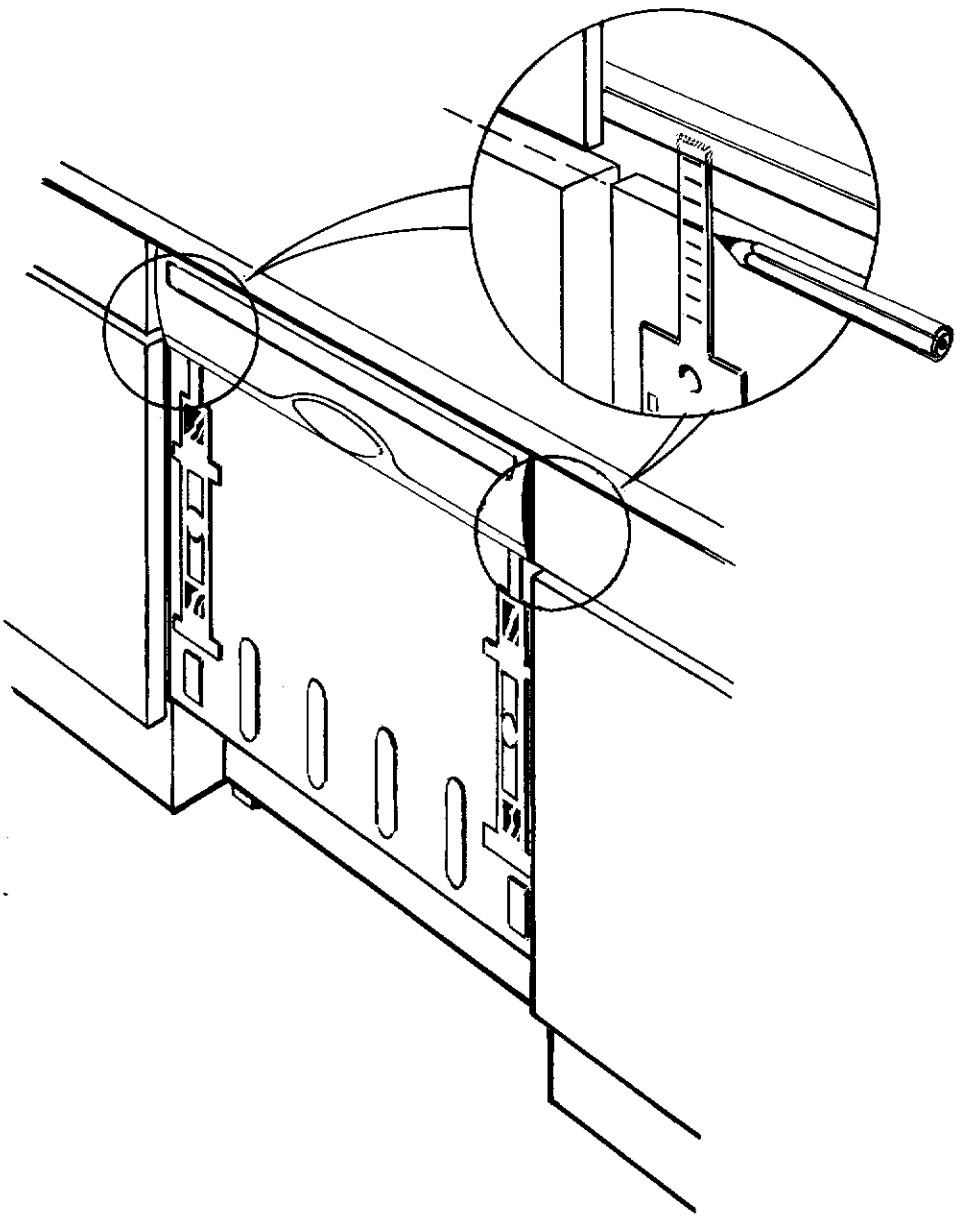

11

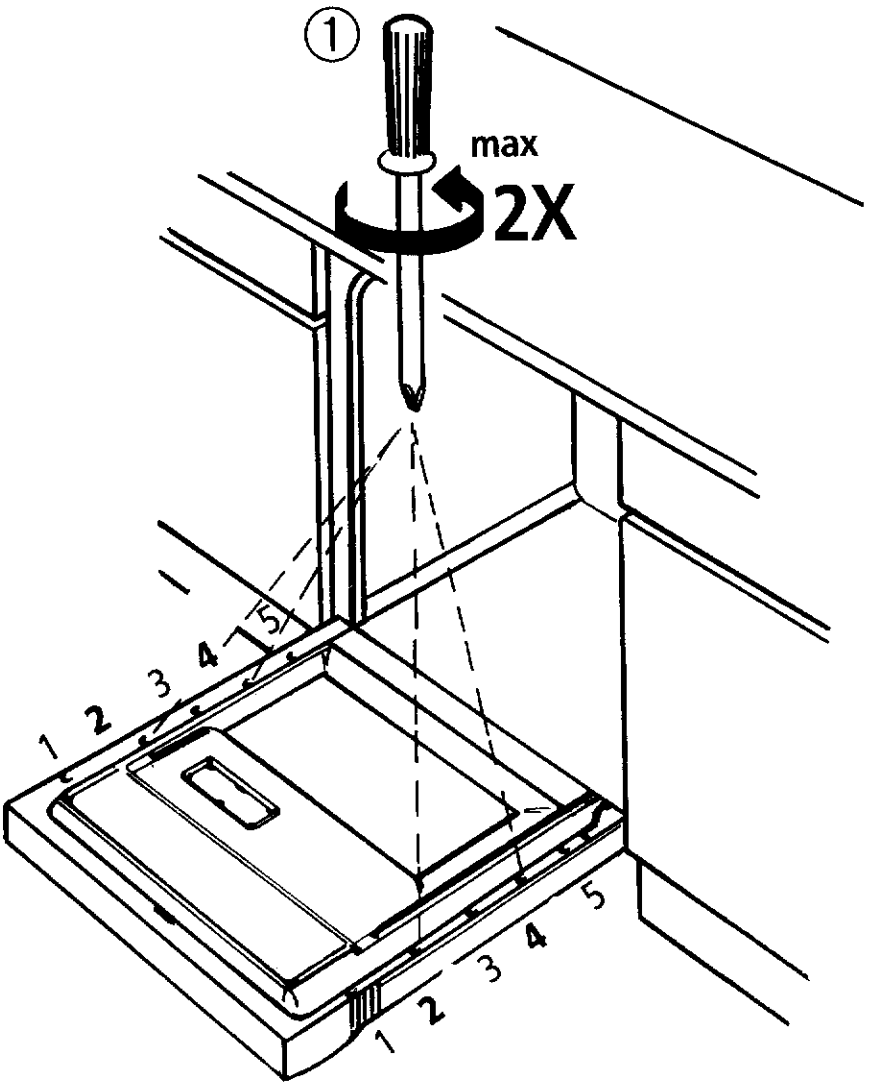

Ⓓ Schrauben 2+4 mit max. 2 Umdrehungen lockern, nicht lösen!
Keinen Elektroschrauber verwenden!

Ⓖⓑ Loosen screws 2 and 4 by max. 2 turns, don't unscrew them completely!
Do not use electric screwdrivers!

Ⓕ Desserrer les vis 2+4 de 2 tours max., ne pas les dévisser complètement!
Ne pas utiliser un tournevis électrique!

Ⓝⓛ Draai schroeven 2 en 4 los; niet verwijderen! (max. 2 slagen)
Geen elektrisch gereedschap gebruiken!

Ⓔ ¡Aflojar los tornillos 2 y 4 hasta un máximo de 2 vueltas, sin destornillarlos completamente!
No usar destornilladores eléctricos!

Ⓟ Afrouxar os parafusos 2 e 4 no máximo de 2 rotações, sem desaparafusá-los completamente.
Não usar chaves de parafusos eléctricos!

Ⓘ Allentare le viti 2 e 4 per un massimo di 2 giri, senza svitarle del tutto!
Non usare cacciaviti elettrici.

Ⓖⓡ Χαλαρώστε τις βίδες 2 και 4 για το πολύ 2 γύρους χωρίς να τις ξεβιδώσετε τελείως!
Μην χρησιμοποιείτε ηλεκτρικές συσκευές.

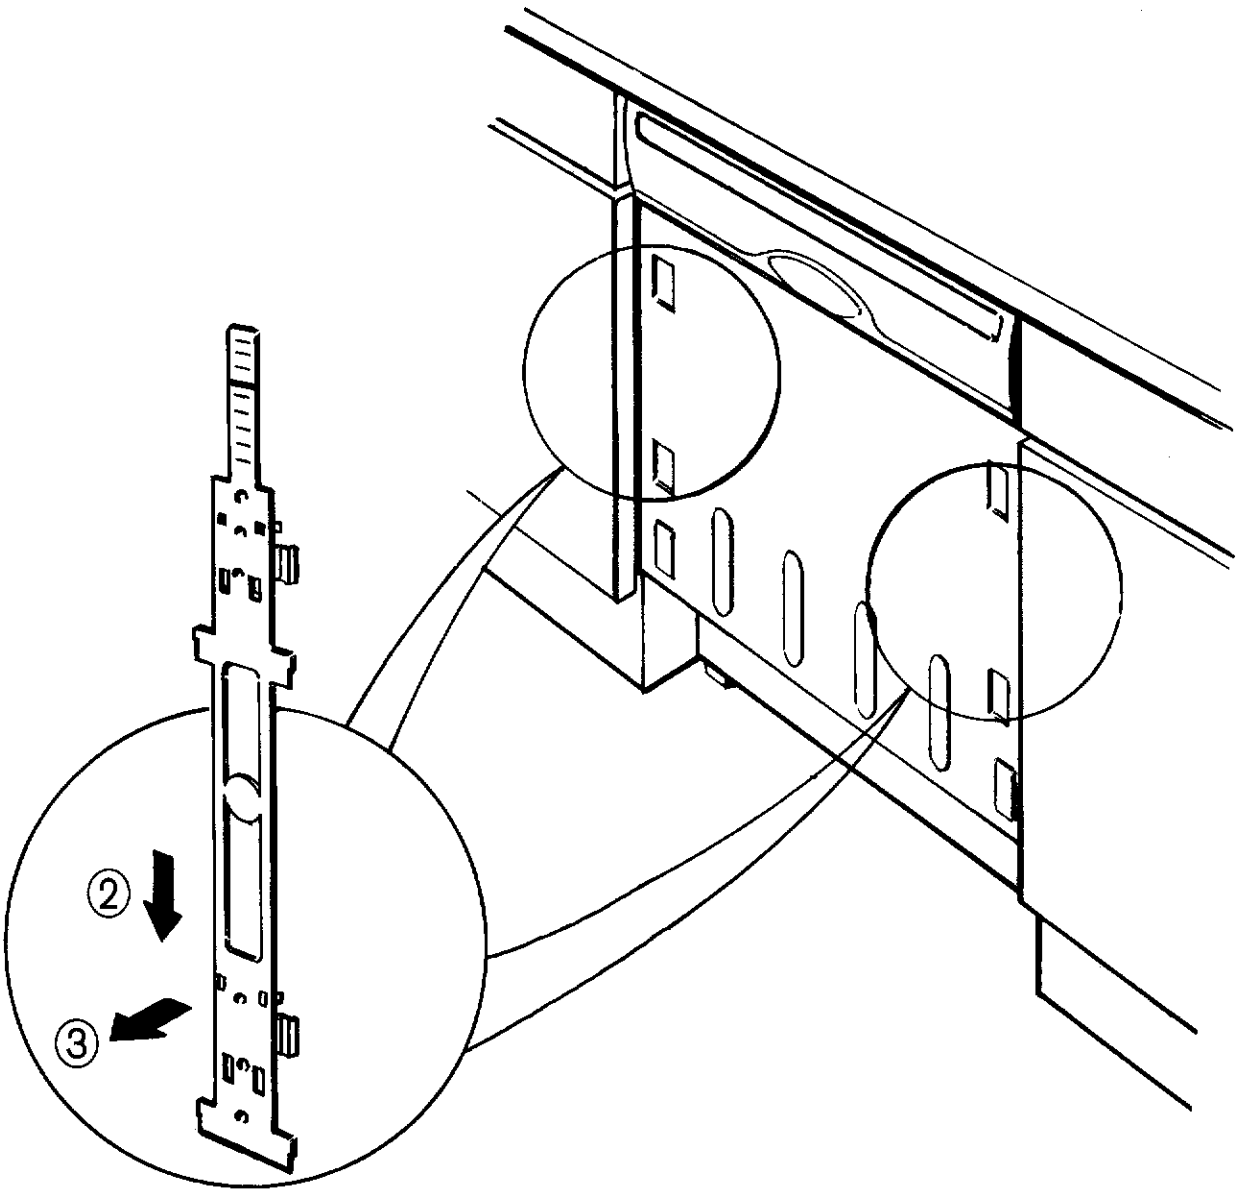
②
③

12

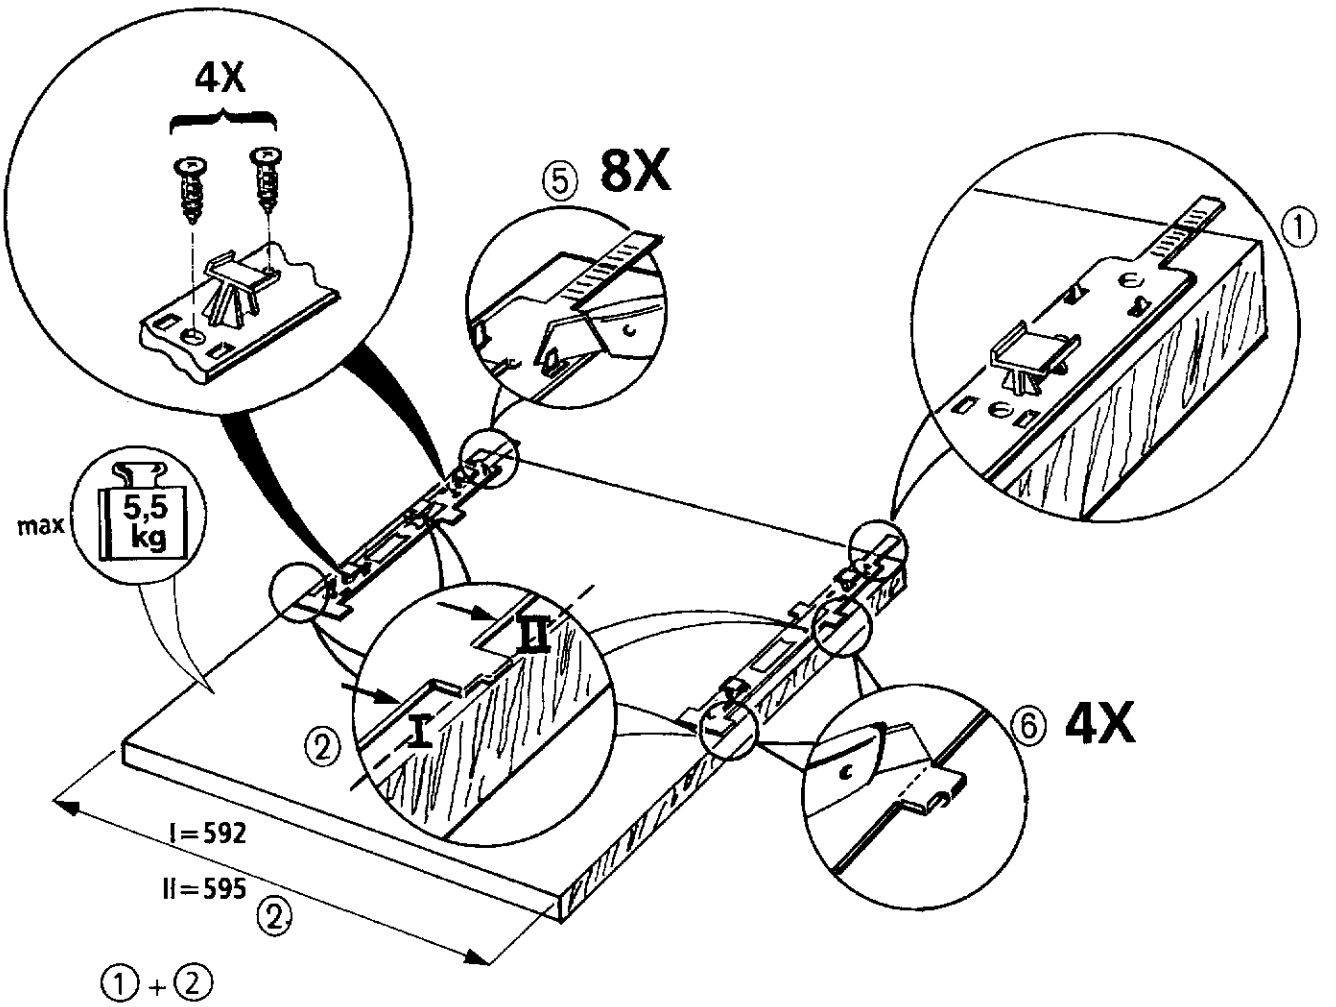

Ⓓ Anlagekanten beachten!
ⒼⒷ Match the locating marks!
Ⓕ Faire coïncider les repères!
ⓃⓁ Controleer de zijkanten!
Ⓔ ¡Alinear los puntos de referencia!
Ⓟ Alinhar os pontos de referência!
Ⓘ Allineare i punti di riferimento!
ⒼⓇ Ταιριαξτε με τα σημεία αναφοράς!

Ⓓ Hinweis: Mindestabstand von Möbeltür zur Geräteunterkante beachten; siehe Seite 2.
ⒼⒷ Note: Leave the minimum distance between the unit door and the appliance lower edge; see page 2.
Ⓕ Remarque: observer la distance minimale de la porte du meuble au bord inférieur de l'appareil; cf. page 2.
ⓃⓁ Aanwijzing: Bewaar de vermelde minimumafstand tussen de deur van het meubel en de onderkant van het apparaat; zie bladzijde.
Ⓔ Nota: Tener cuidado con la distancia mínima entre la puerta del mueble y el lado inferior del aparato; véase la página 2.
Ⓟ Nota: Deve-se ptestar atenção à distância mínima entre a porta do móvel e o parte inferior do aparelho; veja na página 2.
Ⓘ Nota: Fare attenzione alla distanza minima tra la porta del mobile e il lato inferiore dell'apparecchio; vedere pagina 2.
ⒼⓇ Σημείωση: προσεξτε την ελάχιστη απόσταση της πόρτας του επίπλου στο κάτω τμήμα της συσκευής. Δέστε την σελίδα 2.

13

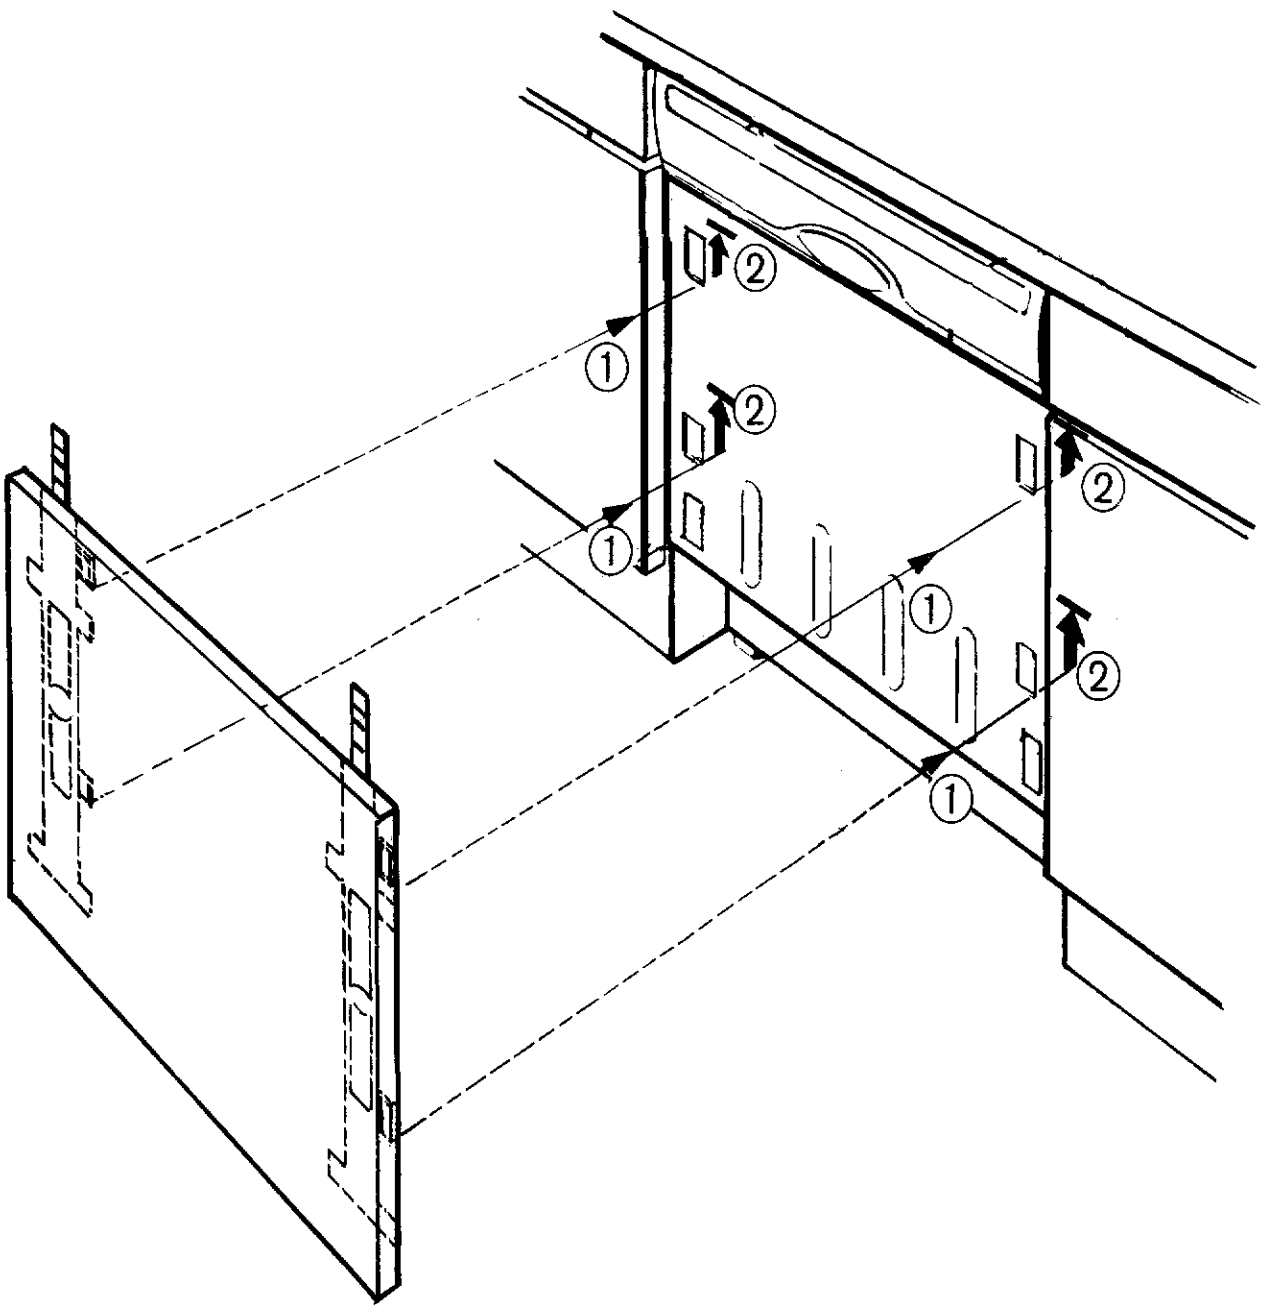

14

①

Ⓓ Schrauben 2 + 4 locker anziehen.
ⒼⒷ Insert the screws 2 + 4 without tightening.
Ⓕ Ne pas serrer trop fort les vis 2 + 4.
Ⓝⓛ Draai de schroeven 2 + 4 los.
Ⓔ Atornillar sin apretar los tornillos 2 + 4.
Ⓟ Aparafusar sem apertar os parafusos 2 +4.
Ⓘ Avvitare senza stringere le viti 2 + 4.
ⒼⓇ Βιδώστε τις βίδες 2 και 4 χωρίς να σφίξετε.

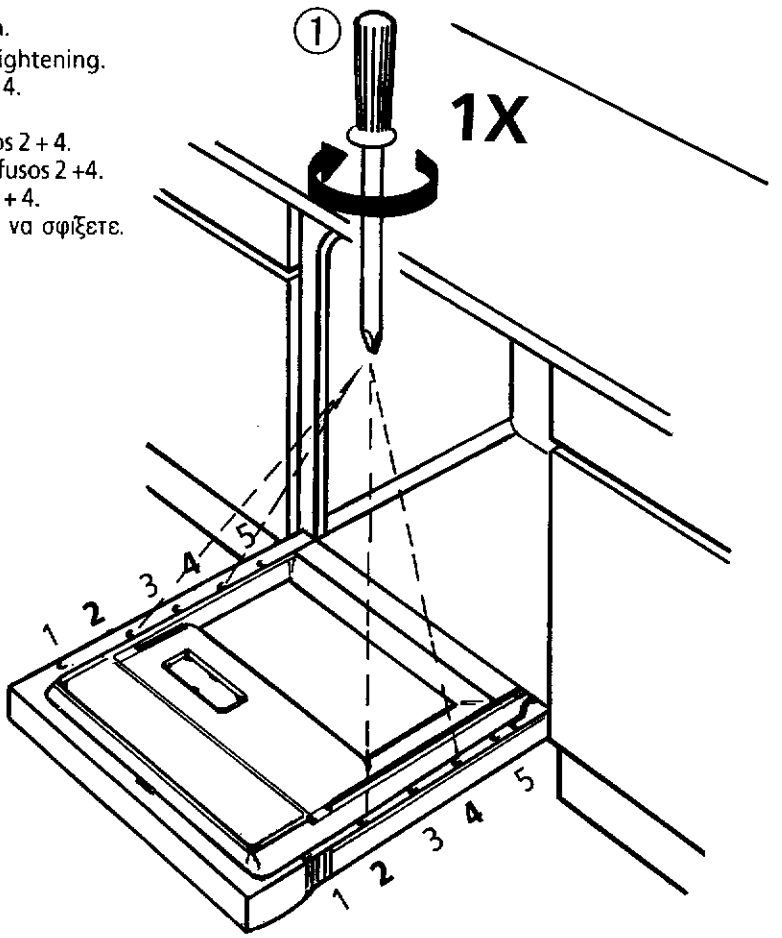

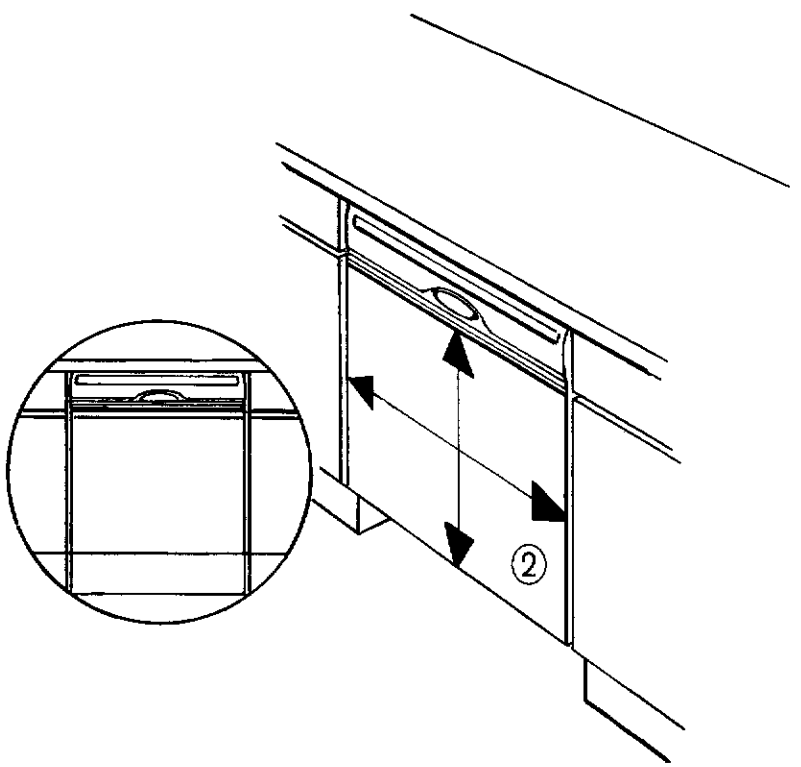

②

Ⓓ Wenn nötig, Position der Möbeltür korrigieren; dann Schrauben fest anziehen.
ⒼⒷ If necessary, correct the position of the cabinet's door and then tighten the screws.
Ⓕ Si nécessaire, corriger la position de la porte du meuble; puis serrer les vis à fond.
Ⓝⓛ Indien nodig, de stand van de deur van het meubel corrigeren en de moeren weer goed vastdraaien.
Ⓔ Si fuera necessario, corregir la posición de la puerta, luego apretar a fondo los tornillos
Ⓟ Se for necessário ajustar a posição da porta a em seguida apertar muito bem os parafusos.
Ⓘ Se necessario correggere la posizione dello sportello, quindi stringere a fondo le viti.
ⒼⓇ Αν είναι απαραίτητο, διορθώστε την θέση της πόρτας και σφίξτε τις βίδες.

15

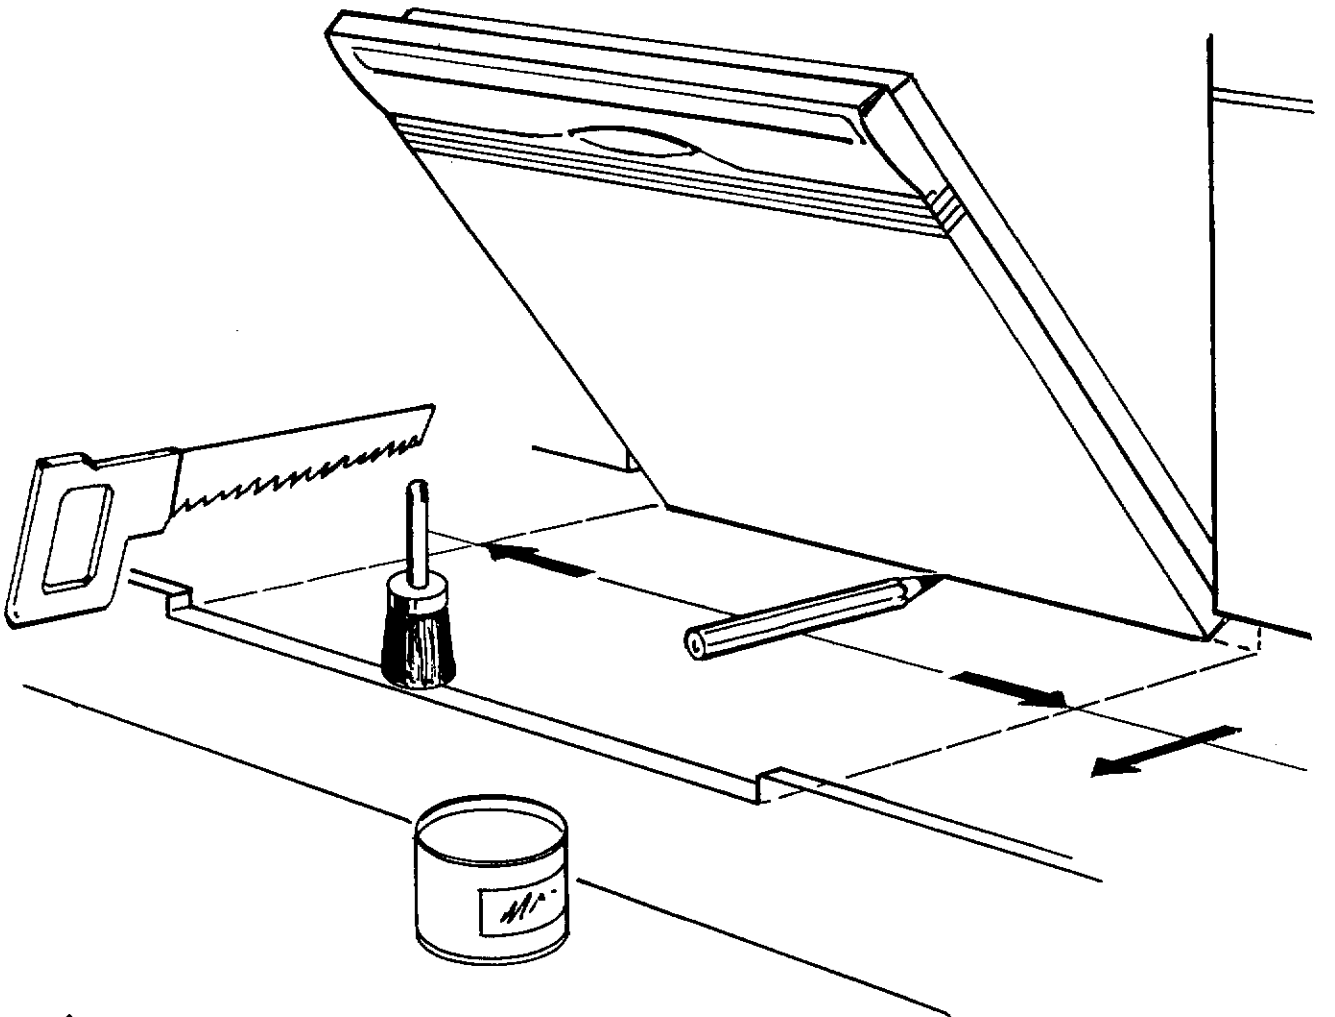

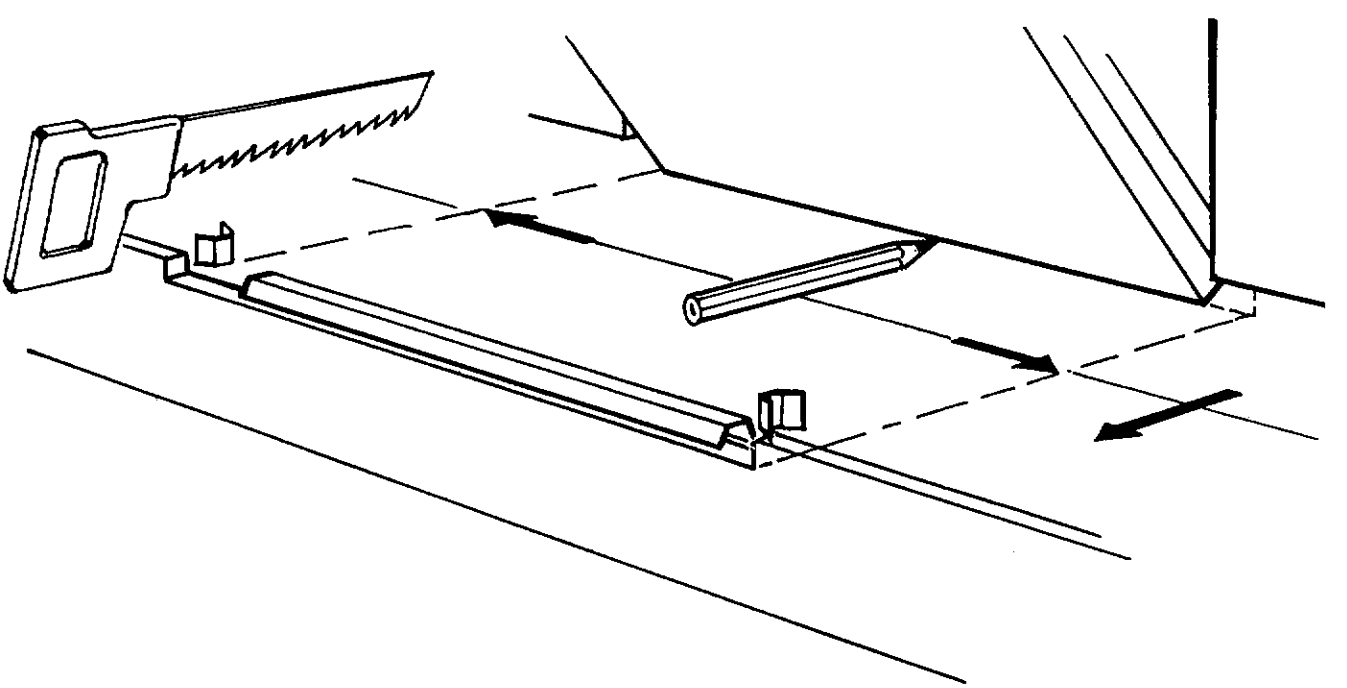

16

(D) Nur für Geräte mit aktiver Trocknung.
(GB) Only for dishwashers with thermodry (acive drying).
(F) Seulement pour appareils avec séchage actif.
(NL) Slechts bij apparaten met een droger.
(E) Sólo para lavavajillas provistos de secado activo.
(P) Apenas para máquinas de lavar louça dotadas de secagem activa.
(I) Solo per lavastoviglie provviste di asciugatura attiva.
(GR) Μόνο για πλυντήρια με ενεργό στεγνωμα.

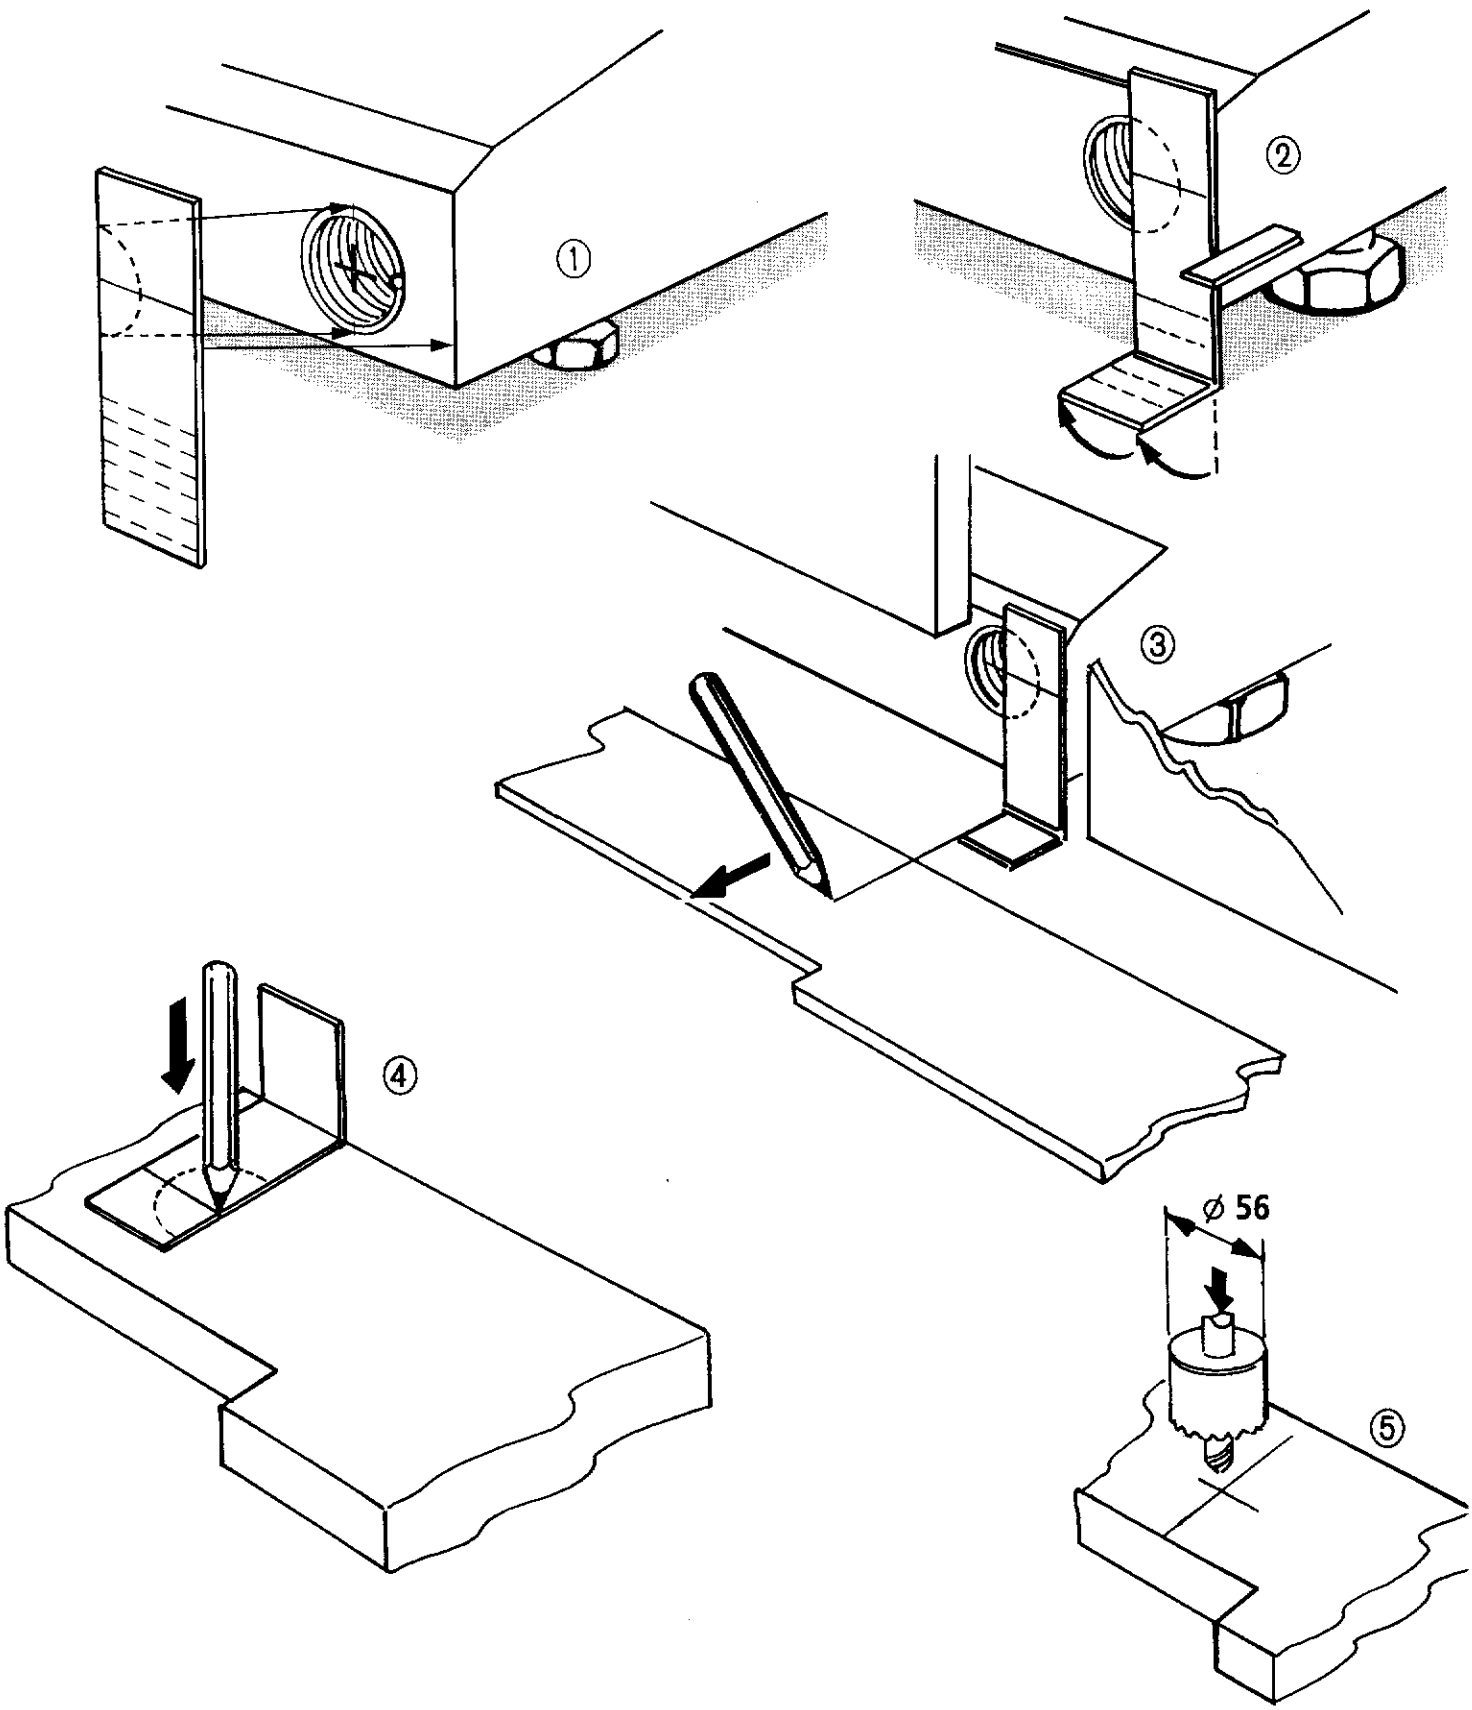

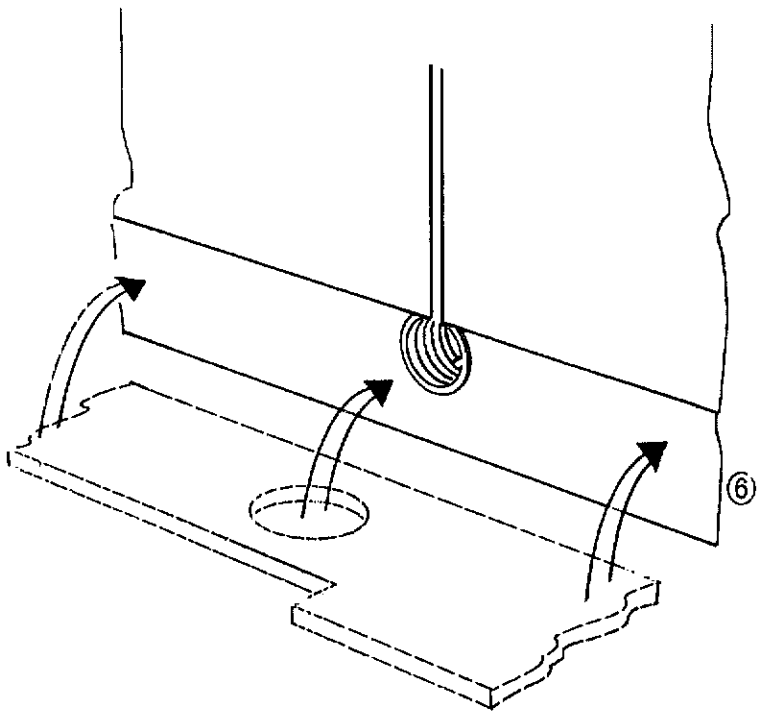
⑥

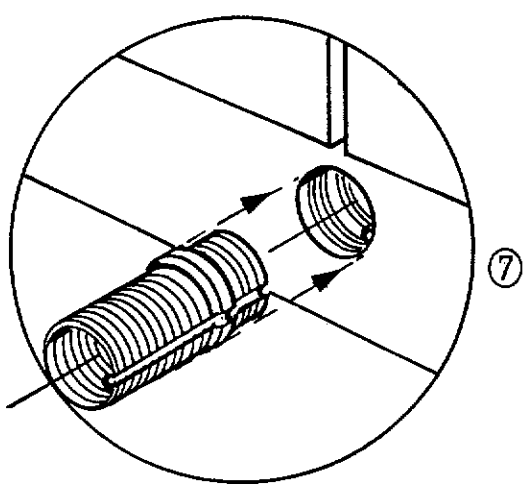
⑦

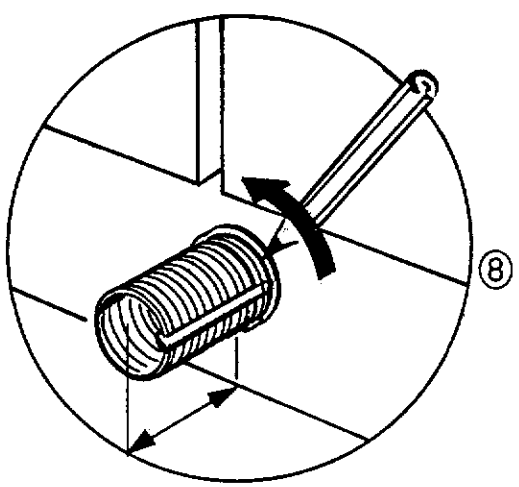
⑧

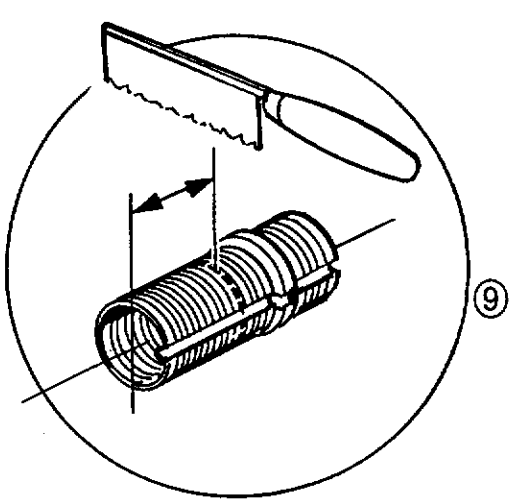
⑨

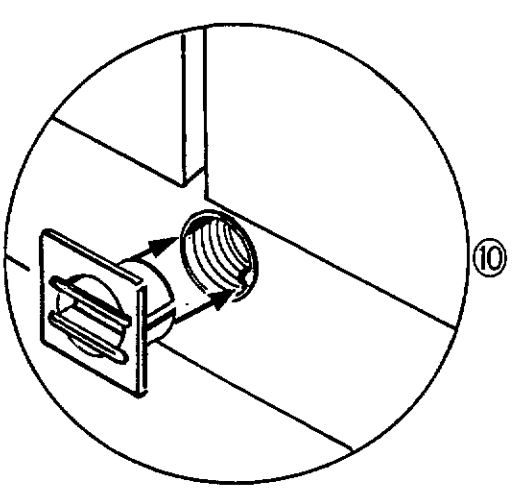
⑩

Total Chlorine Free

4619 720 42023-03

D GB F NL E P I GR

Printed in Germany
MA **5604**/11.97

How to use the appliance

Further indications are given in the single chapters and in the user instructions.

Switch on the appliance

Automatic start by turning the programme selector knob (in case of retractable knob, first press the knob to access it).

How to fill the detergent

Large compartment **A:**

With each wash cycle.

Small compartment **B:**

For programmes with pre-wash only.

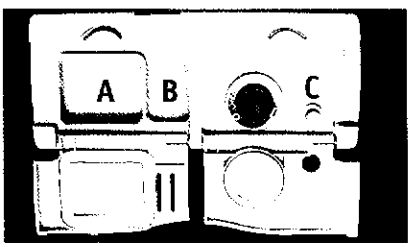

Check the rinse aid level

Mechanical indicator **C**.
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator **D**. Electric indicator on control panel (if provided).

Load the racks

Refer to the dishwasher loading instructions.

Close the dishwasher door, turn on the water tap

Select a programme

Select the desired programme.
The corresponding indicator lamp comes on.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

"Change programme"

- Press the START button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the START button again.

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

Only after the START button has switched off: Access the knob (in case of retractable knob, press and then release the knob).

Turn off the water tap, unload the racks

To accelerate the drying process, slightly open the door at the end of the program.
WARNING: WHEN THE DOOR IS OPENED STEAM COMES OUT!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

depending on the model

Multi-purpose support (A): [1]
Depending on the position, for long-handles utensils, cups and glasses. May be used in three different positions.

Crockery holders (B):
Depending on the position, for example plates, cups and long-stemmed glasses.

Revolving glass support (C): [2]
Depending on the position, for example small or long-stemmed glasses.

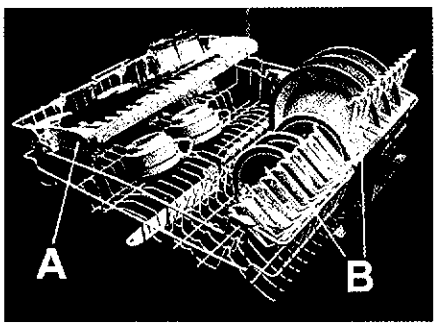

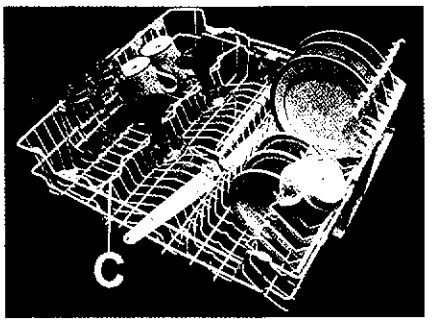

Half Load:

Load the upper rack **only**.

Place the cutlery basket (**D**) in the upper rack.

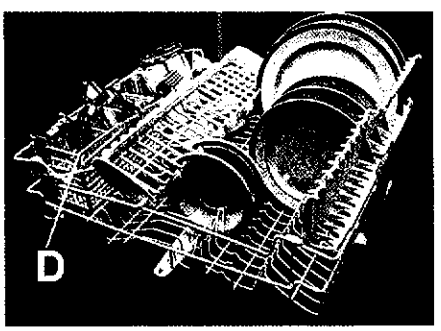

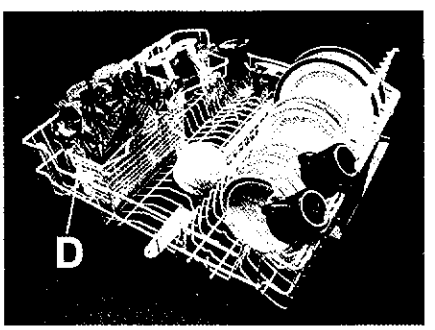

Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the **two** rack handles outwards (**E**) and lower the rack.
- **Upper adjustment:** pull the **two** handles (**E**) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

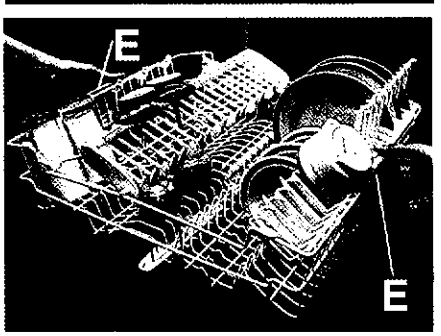

Lower rack:

Depending on the model with fixed or tilting plate holders (**F**).

Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.

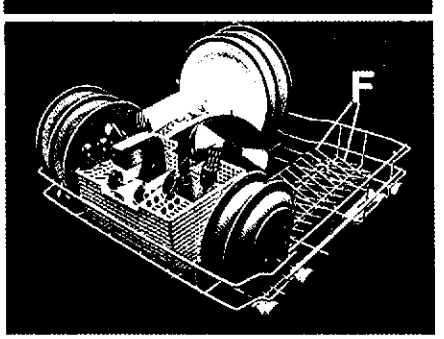

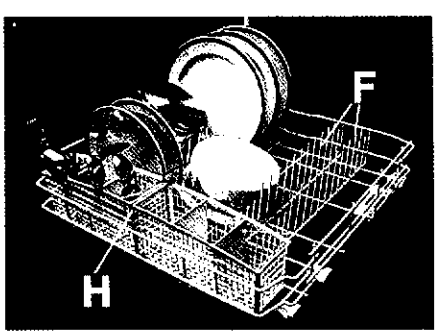

Cutlery basket (G) or (H):

Some models are provided with a grid (**I**) that can be fitted onto the cutlery basket to keep items separated. Cutlery basket (**D**) for appliances with half load only. Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

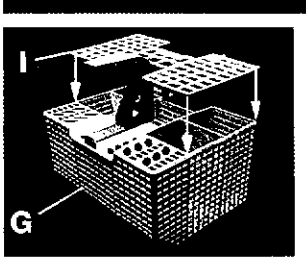

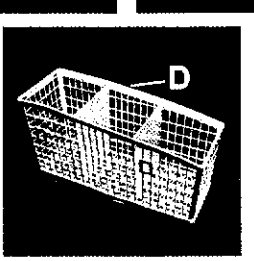

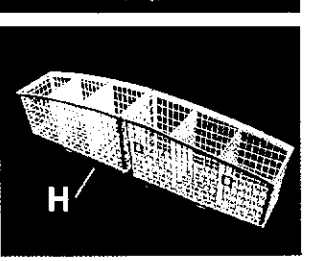

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

Spare parts which are sold separately:

[1] **Multi-purpose support (A) - N. AMH 369 series.**

[2] **Revolving glass support (C) - N. WGH 1000 series.**

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	• No water supply.	• Open the tap.
	• The appliance does not load sufficient water.	• Clean the water supply tap filter. • Ensure there are no kinks in the water hose.
	• There is a power failure.	• Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the domestic circuit fuse.
	• Starting the selected programme.	• The programme can be set to "0" to start.
If crockery is not perfectly dry	• Insufficient rinse aid.	• Increase dosage *.
	• Residual water in cavities.	• Load crockery at an angle.
If crockery is not perfectly clean	• The water jet does not reach the crockery.	• Arrange crockery so that items do not touch each other. Load crockery upside down.
	• Insufficient detergent.	• Follow recommended detergent dosage.
	• Unsuitable programme.	• Select a more intense wash cycle.
	• Spray arms blocked.	• The spray arms must be able to turn freely.
	• Spray arm nozzles clogged.	• Remove any impurities obstructing the water flow *.
	• Incorrect detergent/detergent too old.	• Use a good quality detergent.
Sandy or grainy residues	• Clogged filters.	• Check filters regularly/if necessary clean *.
	• Filters incorrectly assembled.	• Insert the filter correctly *.
Colour of plastic parts faded	• Tomato/carrot juice,...	• Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
• removable	• Streaks on the crockery/glasses.	• Increase the rinse aid dosage *.
	• Streaks on glasses.	• Reduce the rinse aid dosage *.
	• Layer of salt on crockery/glasses.	• Close the salt container lid properly *.
• not removable	• Insufficient water softening, calcium deposits.	• Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	• Cannot be washed in the dishwasher.	• Use suitable glasses.
Rust on cutlery	• Not made of stainless steel.	• Use suitable cutlery.
Identifying appliance faults	• The START indicator lamp flashes.	• Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.
	• Indicator F... (if provided).	• Call the After-Sales Service.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

Service: 0000 000 00000 00 0000 000000

Before using the dishwasher, read the user instructions!

6ADG 6956 Quick Reference Guide

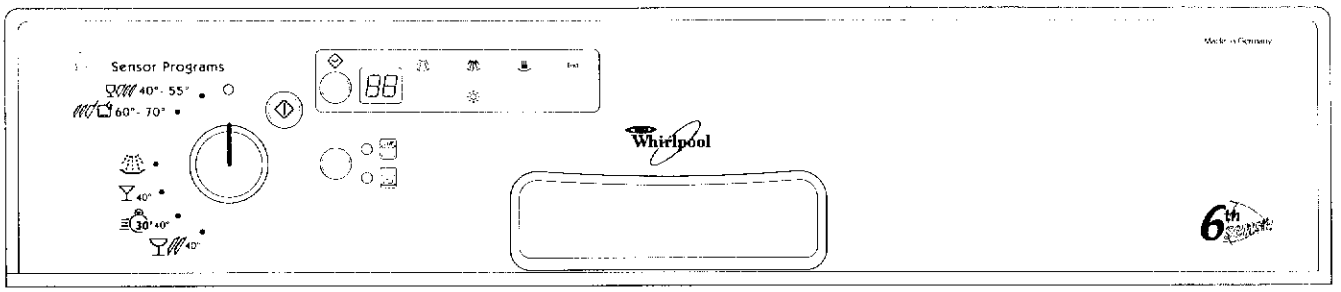

Program selector knob
Mains **On / Off**

Start button
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Indicators

Add rinse aid

Wash cycle

Pre-Rinse → Washing → Drying → End (Programme end)

Options

"Half load - Multizone" button
Load the upper **or** lower rack **only**.
This function can be used with any programme.
Press once = upper rack (the indicator lamp comes on)
Press twice = lower rack (the indicator lamp comes on)
Press 3 times = Off (half load function deactivated).

Time and failure display [3]
Indicates in hours the time remaining until the start of the wash cycle. Toward the end of the programme, during the drying cycle, the display will indicate the time remaining in minutes.
"F..." Identification of faults for service technician

"Delayed start" button
The wash cycle can be programmed to start after 1 - 24 hours. With each successive touch of the button, the delayed start indicator increases by 1 hour, and after 24 returns to 00. Then press the Start button. The dishwasher will start at the set time.

Programme chart				Detergent [2]		Consumption [3]		
	Programmes		Loading instructions	A	B	Litres	kWh	Minutes
	Sensor Wash	40-55°C	Automatic programme recommended for routine washes, with no dried-on or burnt food (not for EN 50242).	X	X	10,0-13,0	0,80-1,05	50-110
	Sensor Intensive	60-70°C	Automatic programme recommended for heavily soiled crockery with dried-on or burnt food, for example pans and saucepans.	X	X	13,0-20,0	1,10-2,00	90-140
	Pre-Rinse	cold	Crockery to be washed later.	-	-	4,0	0,03	14
	Glass	40°C	Light soiling, for example glasses and cups.	X	-	10,0	0,80	55
	Quickwash	40°C	Lightly soiled crockery with no dried-on food.	X	-	10,0	0,65	30
	Normal [1]	40°C	Normally or heavily soiled crockery.	X	X	17.0	0.89	98

1) Reference program for energy label compliance with AS/NZS 2007;
2) Refer to "User instructions";
3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:
For detailed information on the EN comparison test and other tests, contact the following address:
"nk_customer@email.whirlpool.com".

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91268

(We reserve the right to make technical modifications)